

# KENWOOD

## DDX7015 DDX7045

---

MONITOR WITH DVD RECEIVER

### INSTRUCTION MANUAL

MONITEUR AVEC RÉCEPTEUR DVD

### MODE D'EMPLOI

MONITOR CON RECEPTOR DVD

### MANUAL DE INSTRUCCIONES

KENWOOD CORPORATION



# Contents

English

<b>Before Use .....</b>	<b>4</b>	<b>TV Control .....</b>	<b>34</b>
<b>About discs .....</b>	<b>6</b>	<ul style="list-style-type: none"> <li>• Displaying the TV Picture screen</li> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the TV Control screen</li> <li>• Displaying the TV Menu screen</li> <li>• Seek Mode</li> <li>• Auto Memory</li> <li>• Manual Memory</li> <li>• Preset Select</li> <li>• Set Station Name</li> <li>• Direct Search</li> </ul>	
<b>Notes on playing MP3/WMA .....</b>	<b>7</b>	<b>SIRIUS Tuner Control</b>	
<b>DDX7015/7045 Basic operations .....</b>	<b>8</b>	<b>&lt;North American sales only&gt; .....</b>	<b>38</b>
<b>Basic Operations of Remote Controller .....</b>	<b>10</b>	<ul style="list-style-type: none"> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the SIRIUS Tuner Control screen</li> <li>• Displaying the SIRIUS Tuner Menu</li> <li>• Channel Search</li> <li>• Channel Memory</li> <li>• Direct Channel Search</li> <li>• Information Display</li> </ul>	
<b>Switch Screen Mode.....</b>	<b>12</b>	<b>HD Radio Control</b>	
<b>Control during DVD Video or</b>		<b>&lt;North American sales only&gt; .....</b>	<b>42</b>
<b>Video CD Playback.....</b>	<b>14</b>	<ul style="list-style-type: none"> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the HD Radio Control screen</li> <li>• Displaying the HD Radio Menu screen</li> <li>• Seek Mode</li> <li>• Auto Memory</li> <li>• Manual Memory</li> <li>• Receive Mode</li> <li>• Title Display</li> </ul>	
<ul style="list-style-type: none"> <li>• Displaying the DVD/VCD Playback screen</li> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the DVD/VCD Control screen</li> <li>• DVD Disc Menu</li> <li>• VCD Zoom Control</li> <li>• Information Display</li> <li>• Direct Search</li> </ul>			
<b>Tuner Control.....</b>	<b>20</b>	<b>DAB Tuner control.....</b>	<b>46</b>
<ul style="list-style-type: none"> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the Tuner Control screen</li> <li>• Displaying the Tuner Menu screen</li> <li>• Seek Mode</li> <li>• Auto Memory</li> <li>• Manual Memory</li> <li>• Preset Select</li> <li>• Set Station Name</li> <li>• Direct Search</li> <li>• Traffic Information</li> <li>• Search for Program Type</li> <li>• Radio Text</li> </ul>		<ul style="list-style-type: none"> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the DAB Tuner Control screen</li> <li>• Displaying the DAB Tuner Menu screen</li> <li>• Seek Mode</li> <li>• Auto Ensemble Memory</li> <li>• Service Preset Memory</li> <li>• Service Select</li> <li>• Language Filter</li> <li>• Search for Program Type</li> <li>• DAB Information</li> <li>• DAB Announcement</li> </ul>	
<b>CD/MP3/WMA/Disc Changer Play Control.....</b>	<b>26</b>	<b>Weather Band Tuner Control .....</b>	<b>52</b>
<ul style="list-style-type: none"> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the CD/MP3/WMA/Disc Changer Control screen</li> <li>• Displaying the CD/MP3/WMA/Disc Changer Menu screen</li> <li>• Set Disc Name</li> <li>• Directory List (during MP3/WMA play)</li> <li>• ID3/WMA TAG Display (during MP3/WMA play)</li> <li>• Disc Select (during play by disc changer)</li> <li>• Direct Search</li> </ul>		<ul style="list-style-type: none"> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the Weather Band Tuner Control screen</li> </ul>	
<b>Mute Telephone .....</b>	<b>33</b>	<b>Character Entry .....</b>	<b>54</b>
<ul style="list-style-type: none"> <li>• Mute Telephone</li> </ul>		<ul style="list-style-type: none"> <li>• How To Use the Character Entry screen</li> </ul>	
		<b>Source Select.....</b>	<b>55</b>
		<ul style="list-style-type: none"> <li>• Displaying the Control screen</li> <li>• Displaying the Source Select screen</li> </ul>	
		<b>Adjusting the Monitor Display Position and Quality.....</b>	<b>56</b>
		<ul style="list-style-type: none"> <li>• Displaying the Screen Control screen</li> <li>• Displaying the Tilt Adjust screen</li> </ul>	

---

## Setup Menu

Setup Menu .....	57
• Displaying the Control screen	
• Displaying the Setup Menu screen	
Audio Set Up .....	58
• Displaying the Audio Set Up screen	
• Crossover Network Setup	
Audio Set Up .....	60
• Displaying the Car Type Set Up screen	
• Displaying the Speaker Set Up screen	
• Displaying the Channel Level screen	
• Channel Level	
• DTA Setup	
• High Pass Filter Setup	
• Low Pass Filter Setup	
DVD Setup .....	66
• Displaying the DVD SETUP 1 screen	
• Displaying the DVD SETUP 2 screen	
• Language Setup	
• Parental Level Setup	
System Setup .....	70
• Displaying the System Set Up 1 screen	
• Displaying the System Set Up 2 screen	
AV Interface .....	72
• Displaying the AV I/F 1 screen	
• Displaying the AV I/F 2 screen	
User Interface .....	74
• Displaying the User I/F 1 screen	
• Displaying the User I/F 2 screen	
• Touch Panel Adjust	
• Clock	
• Security Code Setup	
SIRIUS Setup <North American sales only> ..	80
• Displaying the SIRIUS Set Up screen	
AMP Control .....	81
• Displaying the AMP Control screen	
DAB Set Up.....	82
• Displaying the DAB Set Up screen	
• Announcement Selection	

## Sound Effects Menu

Sound Effects Menu .....	84
• Displaying the Control screen	
• Displaying the Sound Effects Menu screen	
Audio Control .....	85
• Displaying the Audio Control 1 screen	
• Displaying the Audio Control 2 screen	
Equalizer .....	86
• Displaying the Equalizer screen	
• Tone curve setup	
• Parametric Equalizer	
Zone Control .....	90
• Displaying the Zone Control screen	
Digital Effect .....	91
• Displaying the Digital Effect screen	
Position .....	92
• Displaying the Position screen	
Glossary .....	94
Troubleshooting Guide.....	95
Specifications .....	100

# Before Use

English

## ▲WARNING

**To prevent injury and/or fire, take the following precautions:**

- Ensure that the unit is securely installed. Otherwise it may fly out of place during collisions and other jolts.
- When extending the ignition, battery or ground wires, make sure to use automotive-grade wires or other wires with an area of 0.75mm<sup>2</sup> (AWG18) or more to prevent cable deterioration and damage to the cable coating.
- To prevent short circuits, never put or leave any metallic objects (e.g., coins or metal tools) inside the unit.
- If the unit starts to emit smoke or strange smells, turn off the power immediately and consult your Kenwood dealer.
- Do not touch the liquid crystal fluid if the LCD is damaged or broken due to shock. The liquid crystal fluid may be dangerous to your health or even fatal. If the liquid crystal fluid from the LCD contacts your body or clothing, wash it off with soap immediately.

 
## ▲CAUTION

**To prevent damage to the machine, take the following precautions:**

- Make sure to ground the unit to a negative 12V DC power supply.
- Do not open the top or bottom covers of the unit.
- Do not install the unit in a spot exposed to direct sunlight or excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing.
- Do not subject the faceplate to excessive shock, as it is a piece of precision equipment.
- When replacing a fuse, only use a new one with the prescribed rating. Using a fuse with the wrong rating may cause your unit to malfunction.
- To prevent short circuits when replacing a fuse, first disconnect the wiring harness.
- Do not use any screws except for the ones provided. The use of improper screws might result in damage to the main unit.
- You cannot view video pictures whilst the vehicle is moving. To enjoy TV/video pictures, find a safe place to park and engage the parking brake.

## NOTE

- If you experience problems during installation, consult your Kenwood dealer.
- If the unit does not seem to be working right, try pressing the reset button first. If that does not solve the problem, consult your Kenwood dealer.

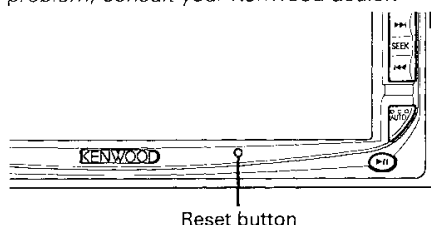

## Screen brightness during low temperatures

When the temperature of the unit falls such as during winter, the liquid crystal panel's screen will become darker than usual. Normal brightness will return after using the monitor for a whilst.

## Audio units you can control from the DDX7015/7045 Receiver (in November of 2003):

 
KDC-CX89, KDC-CX87, KDC-CX85, KDC-C719, KDC-C717, KDC-C715, KDC-C669, KDC-C667, KDC-C665, KDC-C469, KDC-C467, KDC-C465, KDC-D301, KTC-9090DAB, KDV-C830, KDV-C840, KDV-C860, KDC-CX89, KTC-SR901, KTC-SR902, KPA-CP100, KTC-WB100, KTC-V500N/P/E (Set the "O-N" switch to "N" position if provided.)

## Navigation units you can control from the DDX7015/7045 Receiver (in November of 2003):

KNA-DV2100, KNA-DV3100

## Loading and Replacing the battery

Use one lithium battery (CR2025). Insert the batteries with the ⊕ and ⊖ poles aligned properly, following the illustration inside the case.

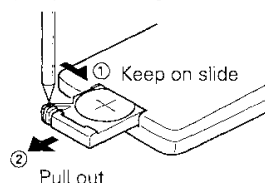

## ▲WARNING

Store unused batteries out of the reach of children. Contact a doctor immediately if the battery is accidentally swallowed.



Do not set the remote on hot places such as above the dashboard.



- The provided batteries are intended for use in operation checking, and their service life may be short.
- When the remote controllable distance becomes short, replace both of the batteries with new ones.

## Cleaning the panel and monitor

When the operator panel and monitor panels are dirty, wipe and clean them using a soft cloth (such as a commercially available silicon coated cloth). When contaminated excessively, clean them using a cloth dipped in a neutral detergent first, then remove the detergent using a dry cloth.

Do not use a hard cloth and a volatile chemical (such as an alcohol). If used, the panel surface may be scratched or printed letters may be erased.

## Cleaning the disc slot

As dust can accumulate in the disc slot, clean it occasionally. Your discs can get scratched if you put them in a dusty disc slot.

 
## Lens Fogging

Right after you turn on the car heater in cold weather, dew or condensation may form on the lens in the disc player of the unit. Called lens fogging, discs may be impossible to play. In such a situation, remove the disc and wait for the condensation to evaporate. If the unit still does not operate normally after a whilst, consult your Kenwood dealer.



## Region codes in the world

The DVD players are given a region code according to the country or area it is marketed, as shown in the following map.

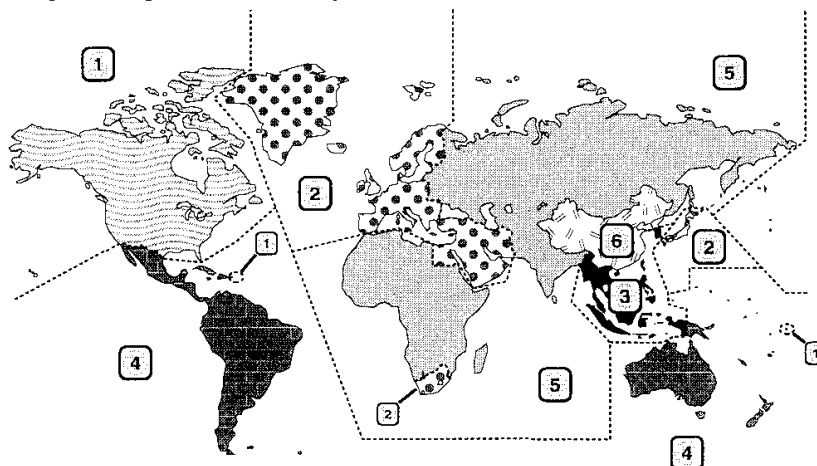

## Icons on the DVD discs

Icon	Description
	Indicates the region code where the disc can be played.
	Number of voice languages recorded with the audio function. The number in the icon indicates the number of voice languages. (Max. 8 languages)
	Number of subtitle languages recorded with the subtitle function. The number in the icon indicates the number of subtitle languages. (Max. 32 languages)
	Number of angles provided by the angle function. The number in the icon indicates the number of angles. (Max. 9 angles)
	Aspect ratios that can be selected. "LB" stands for Letter Box and "PS" for Pan/Scan. In the example on the left, the 16:9 video can be converted into letter box video.

## Unplayable discs

 
This player cannot play back any of the following discs.

- DVD-ROM/DVD-RAM discs
- CDV discs (Only the audio part can be reproduced)
- Photo CD discs
- HQ-VCD discs
- CD-G/CD-EG/CD-EXTRA discs (Only the audio can be reproduced)
- DVD-Audio

Also, you cannot play back the DVD-R/RW and DVD+R/RW discs if not recorded in the DVD-Video format.

### Restrictions due to difference between discs

Some DVD and VCD discs can be played only in certain playback modes according to the intentions of the software producers. As this player plays discs according to their intentions, some functions may not work as intended by you. Please be sure to read the instructions provided with each disc. When an inhibition icon is displayed on the monitor, it indicates that the disc being played is under the restriction as described above.



The illustrations of the display and the panel appearing in this manual are examples used to explain more clearly how the controls are used. Therefore, what appears on the display in the illustrations may differ from what appears on the display on the actual equipment, and some of the illustrations on the display may represent something impossible in actual operation.

### Explanation of icons used on this manual



Indicates the key operation on the receiver.



Indicates the button you must touch.



Indicates the key or joystick operation on the remote controller.



The initial value of each setup is shown.



Gives an additional information or an operation advice.

 
Time is displayed on each control screen in the 12 hour clock display type (with AM/PM displayed) or in the 24 hour clock display type (without AM/PM displayed) depending on the sales area. The display type cannot be changed. In this instruction manual, screens of the 24 hour display type are used as examples.

# About discs

English

## Handling discs

- Don't touch the recording surface of the disc.

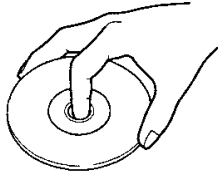


- CD-R/RW, DVD-R/RW, and DVD+R/RW are easier to damage than a normal music CD. Use a CD-R/RW, DVD-R/RW, or DVD+R/RW after reading the caution items on the package etc.

- Don't stick tape etc. on the disc.  
Also, don't use a disc with tape stuck on it.

## When using a new disc

 If the disc center hole or outside rim has burrs, use it after removing them with a ball pen etc.

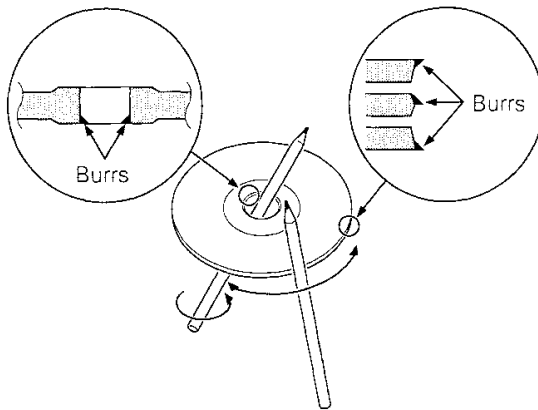


## Disc accessories

Don't use disc type accessories.

## Disc cleaning

 Clean from the center of the disc and move outward.

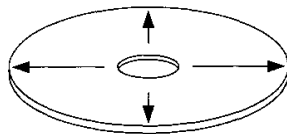





## Removing discs

When removing discs from this unit pull them out horizontally.
 
## Discs that can't be used

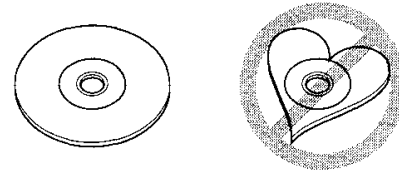- Discs that aren't round can't be used.



- Discs with coloring on the recording surface or that are dirty can't be used.
- This unit can only play the CDs with    . It may not correctly play discs which do not have the mark.
- A CD-R or CD-RW that hasn't been finalized can't be played. (For the finalization process refer to your CD-R/CD-RW writing software, and your CD-R/CD-RW recorder instruction manual.)

## Disc storage

- Don't place them in direct sunlight (On the seat or dashboard etc.) and where the temperature is high.
- Store discs in their cases.

# Notes on playing MP3/WMA

This unit can play MP3 (MPEG1 Audio Layer 3)/WMA.

Note, however, that the MP3/WMA recording media and formats acceptable are limited. When writing MP3/WMA, pay attention to the following restrictions.

## Acceptable media

The MP3/WMA recording media acceptable to this unit are CD-ROM, CD-R, and CD-RW.

When using CD-RW, do full format not quick format to prevent malfunction.

## Acceptable medium formats

The following formats are available for the media used in this unit. The maximum number of characters used for file name including the delimiter (".") and three-character extension are indicated in parentheses.

- ISO 9660 Level 1 (12 characters)
- ISO 9660 Level 2 (31 characters)
- Joliet (64 characters)
- Romeo (128 characters)

Up to 170 characters can be displayed in the long file name format. For a list of available characters, see the instruction manual of the writing software and the section Entering file and folder names below.

The media reproducible on this unit has the following limitations:

- Maximum number of directory levels: 8
- Maximum number of files per folder: 255
- Maximum number of characters for folder name: 64
- Maximum number of folders: 100

MP3/WMA written in the formats other than the above may not be successfully played and their file names or folder names are not properly displayed.

## Settings for your MP3/WMA encoder and CD writer

Do the following setting when compressing audio data in MP3/WMA data with the MP3/WMA encoder.

- Transfer bit rate: MP3: 8 —320 kbps  
WMA: 48 —192 kbps
- Sampling frequency: MP3: 32, 44.1, 48 kHz  
WMA: 32, 44.1, 48 kHz

When you use your CD writer to record MP3/WMA up to the maximum disc capacity, disable additional writing. For recording on an empty disc up to the maximum capacity at once, check Disc at Once.

Play mode may not be possible when portions of the functions of Windows Media Player 9 or higher are used.

## Entering ID3 tag

The Displayable ID3 tag is ID3 version 1.x.

For the character code, refer to the List of Codes.

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0																
1																
2																
3																
4																
5																
6																
7																
8																
9																
A																
B																
C																
D																
E																
F																

## Entering file and folder names

The code list characters are the only file names and folder names that can be entered and displayed.

If you use any other character for entry, the file and folder names are not displayed correctly. They may neither be displayed correctly depending on the CD writer used.

The unit recognizes and plays only those MP3/WMA which have the MP3/WMA extension (.MP3/.WMA).



A file with a name entered with characters not on the code list may not play correctly.

## Writing files into a medium

When a medium containing MP3/WMA data is loaded, the unit checks all the data on the medium. If the medium contains a lot of folders or non-MP3/WMA files, therefore, it takes a long time until the unit starts playing MP3/WMA. In addition, it may take time for the unit to move to the next MP3/WMA file or a File Search or Folder Search may not be performed smoothly.



Loading such a medium may produce loud noise to damage the speakers.

- Do not attempt to play a medium containing a non-MP3/WMA file with the MP3/WMA extension. The unit mistakes non-MP3/WMA files for MP3/WMA data as long as they have the MP3/WMA extension.
- Do not attempt to play a medium containing non MP3/WMA.

 
 
## MP3/WMA playing order

When selected for play, Folder Search, File Search, or for Folder Select, files and folders are accessed in the order in which they were written by the CD writer.

Because of this, the order in which they are expected to be played may not match the order in which they are actually played. You may be able to set the order in which MP3/WMA are to be played by writing them onto a medium such as a CD-R with their file names beginning with play sequence numbers such as "01" to "99", depending on your CD writer.

# DDX7015/7045 Basic operations

English

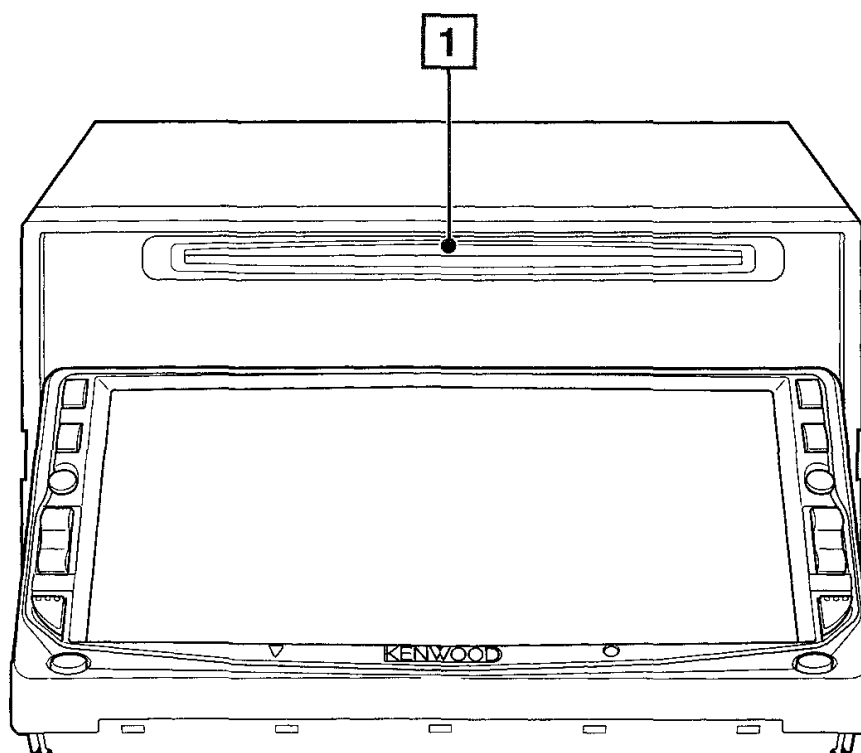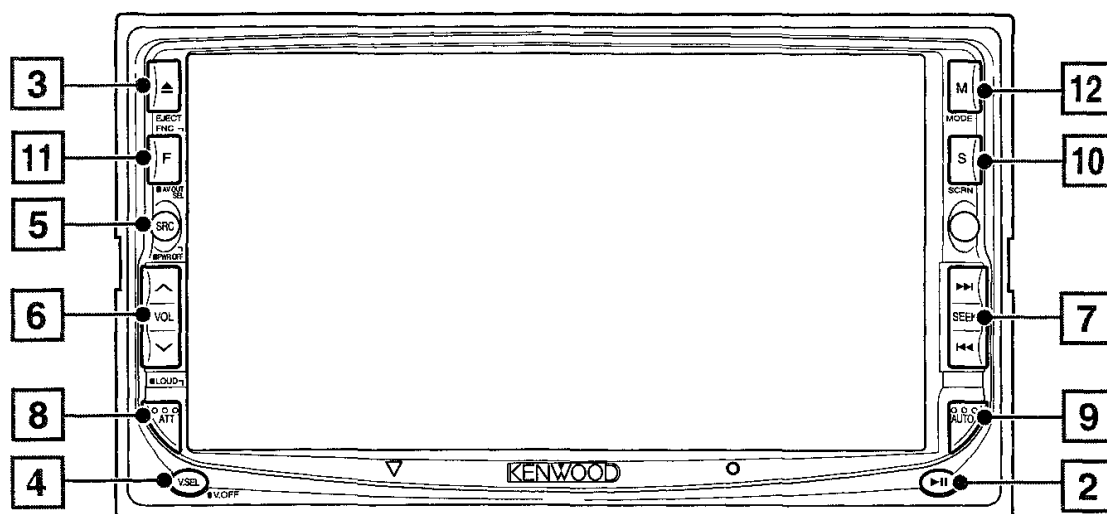

**1 Play Disc**  
**[Disc insertion slot]**

A disc is played when you insert it.

**2 Play/Pause**  
**[▶||] key**

Pauses and replays a disc.

**3 Eject Disc**  
**[EJECT] key**

The disc is ejected.

**4 Switch Video Sources**  
**[V.SEL] key**

The video sources are switched each time you press the key.

 


\* Optional accessory

Clears the video image when pressed more than one second. When pressed again, the original image is redisplayed.

**5 Switch Audio Source/Power Supply**  
**[SRC] key**

The audio sources are switched each time you press the key.

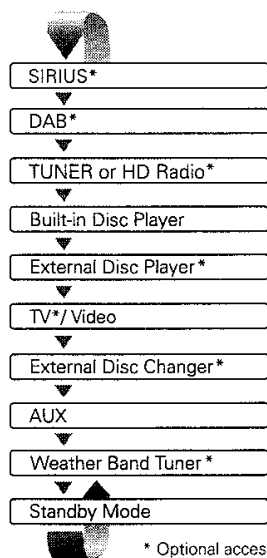

\* Optional accessory

Hold down more than 1 second to turn the power supply Off.  
Push it again to turn power supply On.

**6 Volume Controls**  
**[VOL] key**

**7 Track/Station Selectors**  
**[SEEK] key**

Selects a music or chapter, track, or frequency.

**8 Attenuator/Loudness**  
**[ATT]/[LOUD] key**

Attenuates the volume.

Press it again to cancel muting.

Press it for more than one second to turn the Loudness function on or off. (see page 85)

If turned on, high and low tones are enhanced during low volume.

**9 Select Seek Mode**  
**[AUTO] key**

 
Selects the Seek mode. (see pages 22/36 for the <Seek Mode>)

**10 Screen Setup**  
**[SCRN] key**

Displays the Screen Control or Tilt Control screen. (see page 56)

**11 Function**  
**[FNC] key**

The video sources are switched each time you press the key.

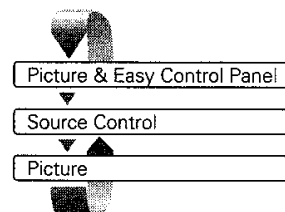

Switches the source that is output at the AV OUTPUT terminal when it is pressed more than 1 second.

**12 Switch Screen Mode**  
**[MODE] key**


The screen mode is switched. (see page 12)



The display turns on when you put the parking brake, except for the navigation system.

# Basic Operations of Remote Controller

 English

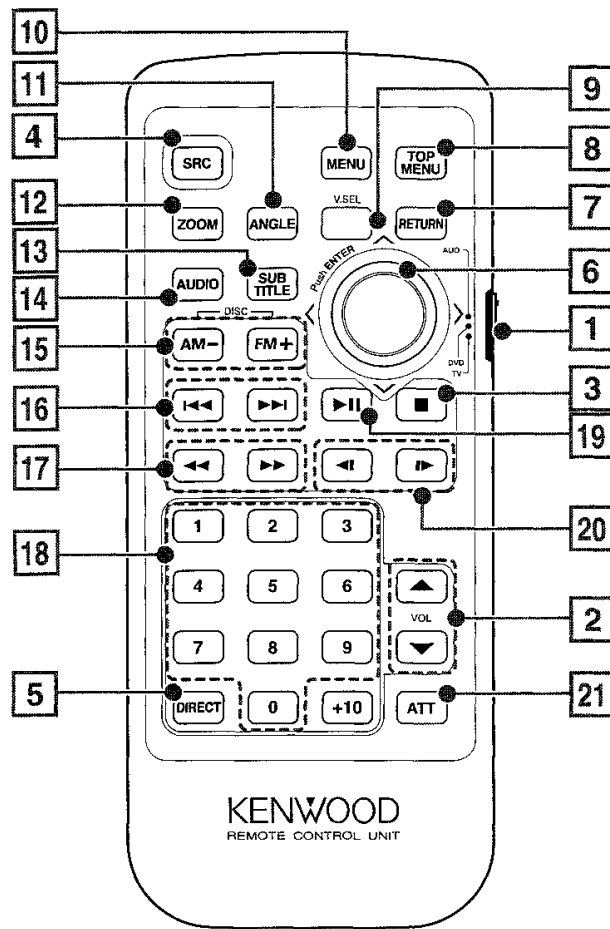

## 1 Remote Control Mode selector

Selects one of the following remote control modes.

TV: TV source

DVD: Built-in DVD/VCD/CD/MP3/WMA player source

AUD: Tuner source or attached disc changer/disc player source

## 2 Volume Control

Adjusts the volume.

## 3 [DISC]

Stops to play the built-in disc player.

## 4

Switches over the sound source each time it is pressed.

## 5

Selects the Direct Search mode.  
(see pages 19/24/33/37 for <Direct Search>)

- [6] Joystick**  
**[DVD]**  
 Enters your selection from the DVD Disc Menu.
- [7] [DVD] [VCD]**  
 Returns to the previous screen when the DVD/VCD Disc Menu is used.
- [8] [DVD]**  
 Calls the Top menu of DVD Disc Menu.
- [9] Switch Video Sources**  
**[V.SEL] key** (When **[1]** is set to "TV")  
 The video sources are switched each time you press the key.



\* Optional accessory

- [10] [DVD]**  
 Calls the DVD Disc Menu.
- [11] [DVD]**  
 Each time you press the button, the angle switches.
- [12] [DVD] [VCD]**  
 Each time you press the button, the zoom ratio switches.
- [13] [DVD]**  
 Switches a subtitle language.
- [14] [DVD]**  
 Switches an audio language.



- [15] [DISC]**  
 Select a folder or a disc.
- [TV]**  
 FM: Switches to TV1, TV2, or VIDEO.
- [TUNER]**  
 FM: Switches to the FM1, FM2, or FM3 band.  
 AM: Switches to the AM band.
- [16] [DISC]**  
 Selects a chapter, a track or a song.
- [TV]**  
 Select a channel.
- [TUNER]**  
 Selects a station.
- [17] [DVD]**  
**◀◀**: Fast Backward (Rewind). The speed changes each time it is pressed.  
**▶▶**: Fast Forward. The speed changes each time it is pressed.
- [18] [TV] [TUNER]**  
**[1] — [6]** : Call the stations from memory.
- [19] [DISC]**  
 Plays or pauses.
- [TUNER]**  
 Selects the Seek mode. (see page 22/44 for the <Seek Mode>)
- [20] [DVD]**  
**◀◀**: Slow Backward.  
**▶▶**: Slow Forward.
- [21] Attenuator**  
**[ATT] key**  
 Attenuates the volume.  
 Press it again to cancel muting.

<b>[DVD]</b>	: An operation during DVD playback
<b>[VCD]</b>	: An operation during VCD playback
<b>[DISC]</b>	: An operation during DVD, VCD, CD, MP3/WMA or MD playback
<b>[TV]</b>	: An operation during TV source
<b>[TUNER]</b>	: An operation during FM/AM broadcasting source

Table 1. *Continued*

English

  The Screen mode of the monitor changes each time the [MODE] key is pressed.

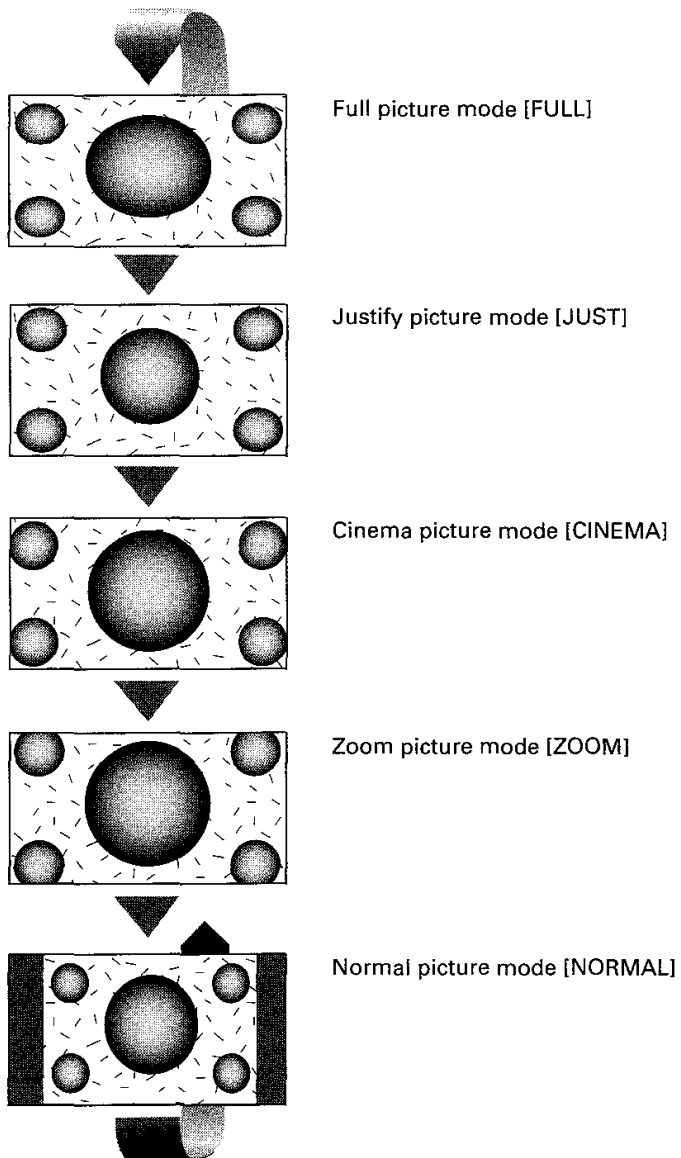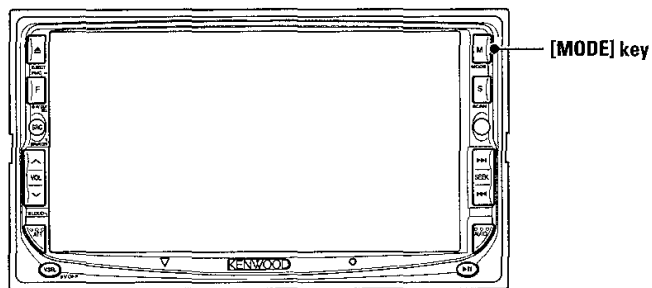

- When the Menu, Easy Control screen, or Navigation is selected, it is shown in the full-size display mode automatically. Their Screen mode cannot be changed.
- The Screen mode can be set for each of DVD/VCD, TV, and video images.





# Control during DVD Video or Video CD Playback

 
English

## Control during DVD Video or Video CD Playback


Various control screens appear when you play back a DVD Video (DVD) or a Video

### Displaying the DVD/VCD Playback screen


You can use the following operations when displaying DVD/VCD images.



DVD playback screen

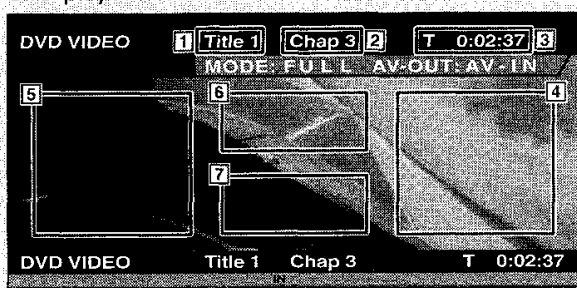 

VCD playback screen

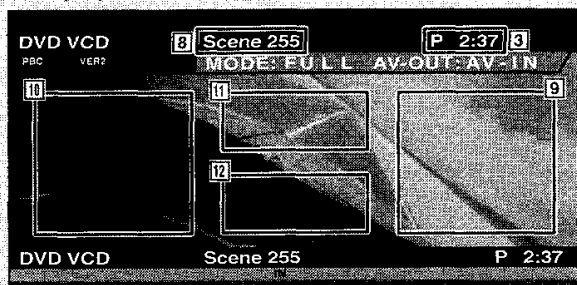 

- 1 Title Number Display
- 2 Chapter Number Display
- 3 Play Time Display
- 4 Forward Chapter Search Area  
Selects the next chapter.
- 5 Backward Chapter Search Area  
Selects the previous chapter.
- 6 DVD Disc Menu Control Buttons Area  
Displays the Disc Menu Control buttons (see page 18).
- 7 Information Display Button Area (see page 19)

- 8 Scene/Track Number Display
- 9 Forward Scene/Track Search Area  
Selects the next scene (when PBC is On) or track (when PBC is Off).
- 10 Backward Scene/Track Search Area  
Selects the previous scene (when PBC is On) or track (when PBC is Off).
- 11 Zoom Control Button Area  
Displays the Zoom Control buttons (see page 19).
- 12 Information Display Button Area (see page 19)

- For DVD/VCD playback, DVD/VCD picture selection, or controller key operations, see <DDX7015/7045 Basic Operations> (see page 8).
- The information display is cleared automatically after approximately 5 seconds. Also, the information can be displayed automatically when it is updated (see page 75).


## CD (VCD) disc.
 
### Displaying the Easy Control Panel

The Control Panel is displayed in a floating position of the DVD/VCD screen.



Display of Easy Control Panel

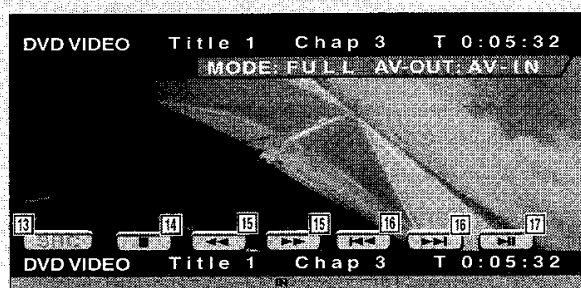

13 Switches the source.

14 Stops to play.

15 Rewinds or fast forwards.

16 Chapter Search (DVD)  
Searches for a chapter.

Scene/Track Search (VCD)

Selects a scene (when PBC is On) or a track (when PBC is Off).

17 Plays or pauses.



The Easy Control Panel display is cleared when you touch the center of image display area.

# Control during DVD Video or Video CD Playback

 
English

## Displaying the DVD/VCD Control screen

Plays a DVD/VCD using various functions.



DVD/VCD Control screen

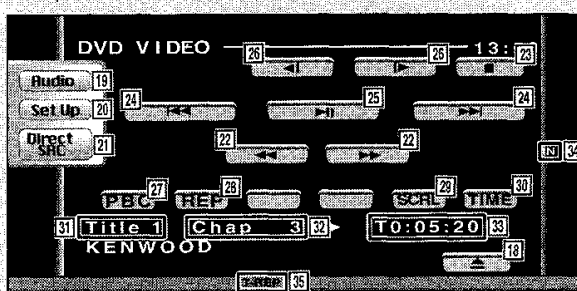

- 18 Ejects the disc from the built-in disc player.
- 19 Calls the Sound Effects Menu. (see page 84)
- 20 Calls the Setup Menu. (see page 57)
- 21 Displays the Source Select screen. (see page 55)
- 22 Fast Forwards or Rewinds.
- 23 Stops to play.  
When pressed twice, the disc is played from its beginning when you play it in the next time.
- 24 Selects a chapter, a scene or a track.  
When the DVD is paused, touch this button to start single-frame stepping.
- 25 Plays or pauses.
- 26 Slow Forwards or Backwards. (during DVD playback only)
- 27 Turns the PBC function of VCD On or Off. (when VCD Ver 2.0 or SVCD is in use only)
- 28 Switches the Repeat Play operations in the following sequence.  
DVD: Title Repeat, Chapter Repeat, Repeat Off  
VCD: Track Repeat, Repeat Off (Available when the PBC is off)
- 29 Scrolls the display text.
- 30 Switches the play time display in the following sequence.  
DVD: Title, chapter, remaining titles  
VCD: Track, disc, remaining discs (Effective only when the PBC function is off)
- 31 Title Number Display (DVD)
- 32 Chapter/Scene/Track Number Display
- 33 Play Time Display
- 34 Appears when a disc is inserted.
- 35 Function Indicator



# Control during DVD Video or Video CD Playback

English

 
## DVD Disc Menu

Selects an option from the DVD Disc Menu.

### 1 Displays the Disc Menu Control screen



**6** DVD Disc Menu Control Buttons Area (page 14)

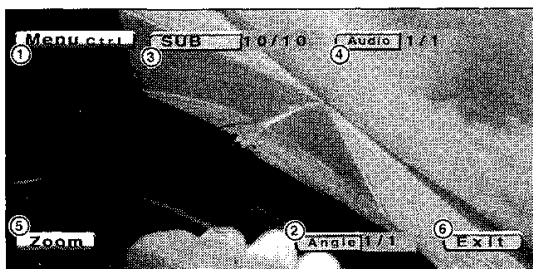


- ① Calls the Menu Control.
- ② Switches the picture angle.  
(during program playback only)
- ③ Switches the caption language.  
(during program playback only)
- ④ Switches the voice language.  
(during program playback only)
- ⑤ Displays the Zoom Control screen.
- ⑥ Clears the Disc Menu Control.

### 2 Select Disc Menu options
 
#### Disc Menu



**Menu ctrl**

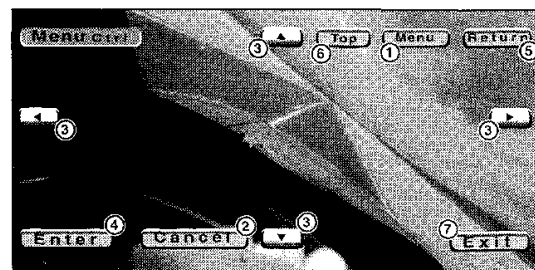


- ① Calls the Menu. (during DVD playback only)
- ② Returns to the Disc Menu Control screen.
- ③ Selects a menu option.
- ④ Enters your menu selection.
- ⑤ Returns to the previous menu screen.
- ⑥ Displays the Top Menu.
- ⑦ Clears the Disc Menu Control.

#### Zoom Control



 **Zoom**

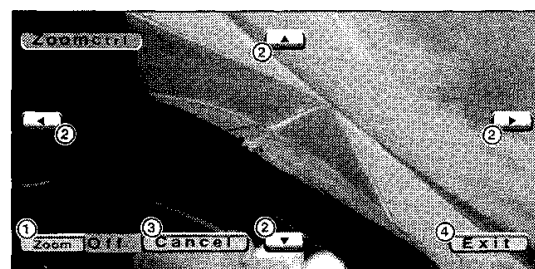

- ① Changes the zoom ratio at 4 levels (2 times, 3 times, 4 times, or off) each time you touch.
- ② Scrolls the screen in the direction you touch.
- ③ Returns to the Disc Menu Control screen.
- ④ Clears the Disc Menu Control.


## VCD Zoom Control

 Displays an enlarged VCD screen.

### 1 Displays the Zoom Control screen



**11** Zoom Control Button Area  
(page 14)

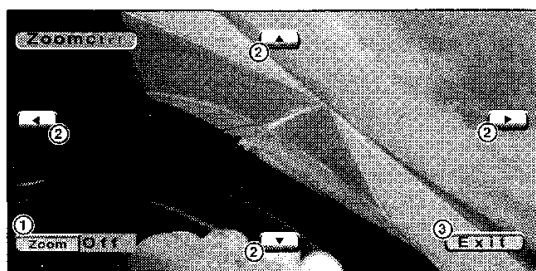

- ① Changes the zoom ratio at 4 levels (2 times, 3 times, 4 times, or off) each time you touch.
- ② Scrolls the screen in the direction you touch.
- ③ Clears the Zoom Control button.

## Information Display

Displays the DVD and AV information.



**7** **12** Information Display Button Area  
(Page 14)

The information is displayed for 5 seconds.

## Direct Search

You can search for a DVD/VCD chapter, scene or track by entering its number.

### 1 Selects the Direct Search mode



**DIRECT**

The following items can be searched directly each time it is pressed.

DVD: Title, Chapter, Time, Direct number

VCD (when PBC is On): Scene, Direct number

VCD (when PBC is Off): Track, Time

However, the direct search may not be supported for some discs.

### 2 Enter a number or time



**0**

**9**

### 3 Search



The operation ends automatically if you do not operate within 10 seconds.

## Tuner Control

 
 
Various control screens appear in the Tuner Source mode.

### Displaying the Easy Control Panel

The Tuner Control Panel is displayed in a floating position of the selected picture.



Displaying the Easy Control Panel

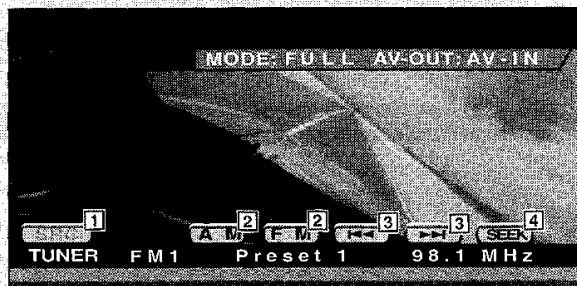

- 1 Switches the source.
- 2 Switches the band (to AM or FM1/2/3).
- 3 Tunes in a station
- 4 Switches the Seek mode.  
(see page 22 for the <Seek Mode>)



- For receiver key operations, see <DDX7015/7045 Basic Operations> (see page 8).
- The Easy Control Panel display is cleared when you touch the center of image display area.




## Displaying the Tuner Control screen

 You can tune in a station using various functions.



Tuner Control screen

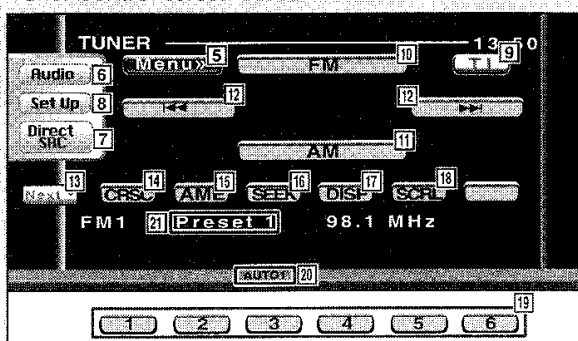


## Displaying the Tuner Menu screen

You can select menu options using various functions.



 Tuner Menu screen

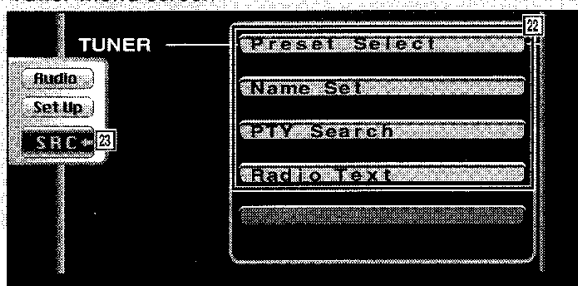

- [5] Calls the Tuner Menu.
- [6] Calls the Sound Effects Menu. (see page 84)
- [7] Displays the Source Select screen. (see page 55)
- [8] Calls the Setup Menu. (see page 57)
- [9] Turns the Traffic Information function On or Off. (see <Traffic Information>, page 24)
- [10] Switches to the FM1/2/3 band.
- [11] Switches to the AM band.
- [12] Tunes in a station.  
Use the <Seek Mode> to change the frequency switching.
- [13] Switches between [1] to [6] buttons and Function buttons to use.
- [14] Turns the CRSC function On or Off. (Only when receiving the FM broadcast)
- [15] Selects the Auto Memory mode. (See page 22 for the <Auto Memory>)
- [16] Switches the Seek mode. (see page 22 for the <Seek Mode>)
- [17] Selects the Program Service Name, Station Name, or Radio Text mode for text display.
- [18] Scrolls the display text.
- [19] When [1] to [6] buttons appear, you can call up the stations from memory.  
For memory of broadcasting stations, see <Auto Memory> (see page 22) or <Manual Memory> (see page 22).
- [20] Seek Mode Indicator
- [21] Memory Number Display
- [22] Selects options from various function menus.
- [23] Returns to the Tuner Control screen.



The available functions vary depending on the model used (the tuner specifications and the broadcasting system that can be received).

# Tuner Control

English

 
## Seek Mode

Sets a station selection.



If **SEEK** is not shown, touch **Next**.

The mode is switched each time you touch the button.

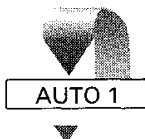

**AUTO 1** Tunes in a station with good reception automatically.



**AUTO 2** Tune in stations in memory one after another.



**MANUAL** Switches to the next channel manually.

## Auto Memory

Stores stations with good reception in memory automatically.

### 1 Select a band you wish to store in memory

 


### 2 Select the Auto Memory mode



If **(AME)** is not shown, touch **Next**.

### 3 Start Auto Memory



Touch or .

Auto Memory terminates when 6 stations are stored or when all stations are tuned in.



The operation ends automatically if you do not operate within 10 seconds.

## Manual Memory

Stores the current receiving station in memory.

### 1 Select a station you wish to store in memory



### 2 Store in memory



If **1** to **6** are not shown, touch **Next**.

Continue to touch until the memory number appears.

 
 
## Preset Select

Lists and tunes in stations in memory one after the other.

### 1 Call the Tuner Menu



### 2 Call the Preset Select Menu

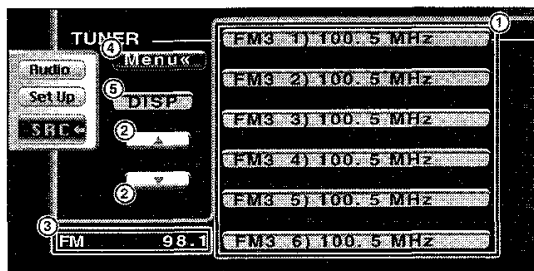

- ① Tunes in the displayed station.  
If the station name is displayed if it has been set.
- ② Switches the band of the displayed station list.
- ③ Band Display.
- ④ Returns to the Tuner Menu.
- ⑤ Switches the Station List display between the Program Service Name and SNPS (Frequency).

## Set Station Name

Names a station.

 
### 1 Tune in a station you wish to name



### 2 Call the Tuner Menu



### 3 Selects the Set Name mode



### 4 Enter a name

For character entry details, see <Character Entry> (see page 54).

### 5 Exit the Set Name mode



- You can store up to 30 stations in memory.
- You can set a station name only after you have applied the parking brake.

# Tuner Control

English

## Direct Search

Tunes in a station when its frequency is entered.

### 1 Select a band



FM+

AM-

### 2 Selects the Direct Search mode



DIRECT

### 3 Enter a frequency



0

9

When you enter them, signal reception starts.

Example: When you receive FM 92.1 MHz

0 9 2 1

Example: When you receive AM 810 kHz

0 8 1 0



The operation ends automatically if you do not operate within 10 seconds.

 
## Traffic Information

When a traffic bulletin starts, any source is switched to the traffic information and it is displayed automatically.

### When the traffic bulletin starts...

The Traffic Information screen appears automatically.

### Traffic Information screen

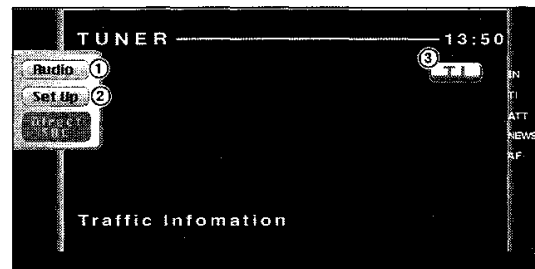

① Calls the Sound Effects Menu. (see page 84)

② Calls the Setup Menu. (see page 57)

③ Turns the Traffic Information function on or off.



During reception of traffic information the adjusted volume is automatically remembered, and the next time it switches to traffic information it's automatically the remembered volume.

Please note that if DSP unit (optional accessory) is connected, the volume will be preset by pressing the **TI** button for 2 seconds or more.


## Search for Program Type

 A program is tuned when you set its program type.

### 1 Call the Tuner Menu



### 2 Call the PTY Search Menu

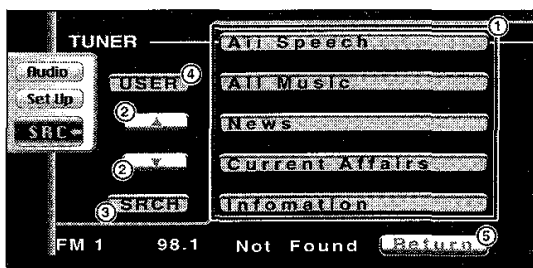

- ① Selects a program type.
- ② Scrolls the program type list.
- ③ Searches for the program type.  
It is displayed when the Program Type is selected.
- ④ Continue to touch more than 2 seconds, the currently receiving station is registered to have the selected program type. (The registered program type is displayed.)  
If you touch it the program type registered in the currently receiving station is displayed.
- ⑤ Returns to the Tuner Menu.

### 3 Select a program type



### 4 Search for the program type



 
## Radio Text

You can display the radio text.

### 1 Call the Tuner Menu



### 2 Display the Radio Text

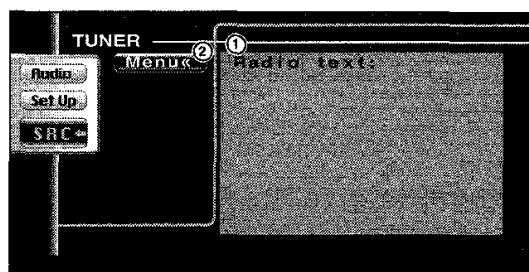

- ① Displays the Radio Text.
- ② Returns to the Tuner Menu.

# CD/MP3/WMA/Disc Changer Play Control

English

## CD/MP3/WMA/Disc Changer Play Control

 
You can call various control screens during CD/MP3/WMA/Disc Changer playback.

### Displaying the Easy Control Panel


The CD/MP3/WMA/Disc Changer Play Control Panel is displayed in a floating position of the selected picture.




Display of Easy Control Panel  
During CD playback

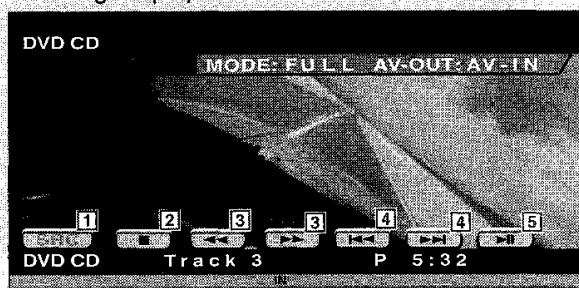

During MP3/WMA playback

 

During playback on disc changer

 

During playback on CD player



- 1 Switches the source.
- 2 Stops to play the built-in disc player.
- 3 When a CD is played back on the built-in disc player:  
Rewinds or fast forwards.
- 4 Selects a song.
- 5 Plays or pauses.
- 6 When an MP3/WMA is played back on the built-in disc player:  
Selects a folder.
- 7 When a disc is played back on the disc changer:  
Selects a disc.




- For CD/MP3/WMA/Disc Changer playback and receiver key operations, see <DDX7015/7045 Basic Operations> (see page 8).
- The Easy Control Panel display is cleared when you touch the center of image display area.

## Displaying the CD/MP3/WMA/ Disc Changer Control screen

 You can play the CD/MP3/WMA/disc changer using various functions.



CD Control screen

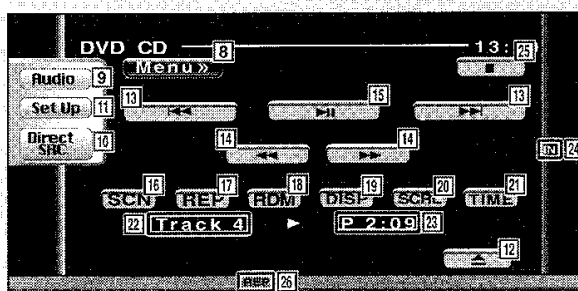


During CD playback

- [8] Calls the CD Menu.
- [9] Calls the Sound Effects Menu. (see page 84)
- [10] Displays the Source Select screen. (see page 55)
- [11] Calls the Setup Menu. (see page 57)
- [12] Ejects the disc from the built-in disc player.
- [13] Selects a track.
- [14] Fast Forwards or Rewinds.
- [15] Plays or pauses.
- [16] Starts or stops Scan Play (that plays the beginning of each song one after the other).
- [17] Repeats to play (the present track).
- [18] Starts or stops Random Play (to play songs in random order).
- [19] Selects the Disc Name (see <Set Disc Name>, page 31), Disc Text, or Track Text mode for text display.
- [20] Scrolls the display text.
- [21] Switches the play time display between Track, Disc, and Disc Remaining Time.
- [22] Track Number Display
- [23] Play Time Display
- [24] Appears when a disc is inserted.
- [25] Stops to play the built-in disc player.  
When pressed twice, the disc is played from its beginning when you play it in the next time.
- [26] Function Indicator

# CD/MP3/WMA/Disc Changer Play Control

 English

MP3/WMA Control screen

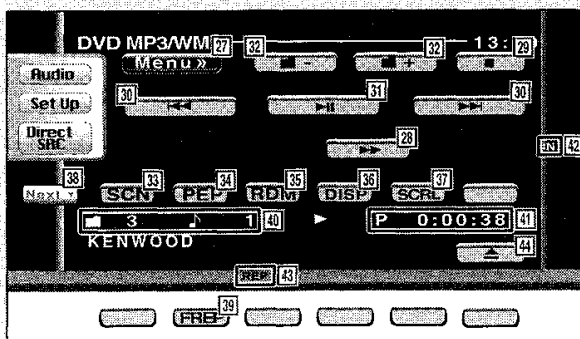


## During MP3/WMA play

- [27] Calls the MP3/WMA Menu.
- [28] Fast Forwards.
- [29] Stops to play.  
When pressed twice, the disc is played back from its beginning in the next time.
- [30] Selects a song.
- [31] Plays or pauses.
- [32] Selects a folder.
- [33] Starts or stops Scan Play (that plays the beginning of each song one after the other).
- [34] Repeats to play (the present song).
- [35] Starts or stops Random Play (to play songs of the present folder in random order).
- [36] Selects the Folder name, File name, Title (ID3/WMA tag), Artist name (ID3/WMA tag), or Album name (ID3 tag) for text display.
- [37] Scrolls the display text.
- [38] Switches the button display.
- [39] Repeats to play the song of the present folder.
- [40] Folder and File Number Display
- [41] Play Time Display
- [42] Appears when a disc is inserted.
- [43] Function Indicator
- [44] Ejects a disc.


 
### Disc Changer/CD player Control screen

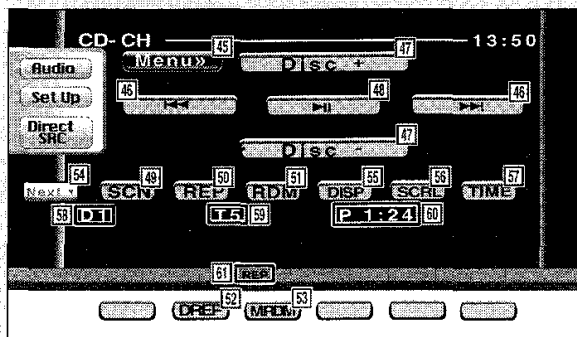

### During play by the disc changer/CD player

- 45 Calls the Disc Changer/CD player Menu.
- 46 Selects a track.  
Starts Fast Forward or Fast Rewind when it is held down.
- 47 Selects a disc. (Function of Disc Changer)
- 48 Plays or pauses.
- 49 Starts or stops Scan Play (that plays the beginning of each song one after the other).
- 50 Repeats to play (the present track).
- 51 Starts or stops Random Play (to play songs in random order).
- 52 Repeats to play disc (the present disc). (Function of Disc Changer)
- 53 Starts or stops Magazine Random Play (to play songs of the disc changer in random order). (Function of Disc Changer)
- 54 Switches the button display.
- 55 Selects the Disc Name (see <Set Disc Name>, page 31), Disc Text, or Track Text mode for text display.
- 56 Scrolls the display text.
- 57 Switches the play time display between Track, Disc, and Disc Remaining Time.
- 58 **Disc Number Display** (Function of Disc Changer)
- 59 **Track Number Display**
- 60 **Play Time Display**
- 61 **Function Indicator**



The functions that can be used and the information that can be displayed will differ depending on the models being connected.

# CD/MP3/WMA/Disc Changer Play Control

 
English

## Displaying the CD/MP3/WMA/ Disc Changer Menu screen

You can select menu options using various functions.



CD Menu screen

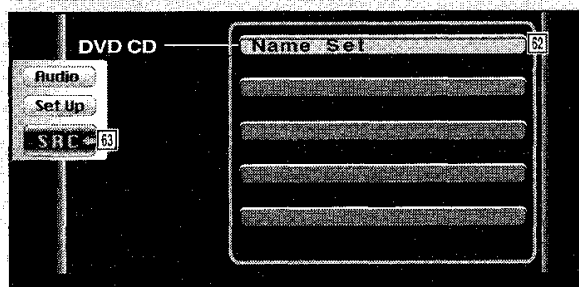

[62] Selects options from various function menus.

[63] Returns to the CD/MP3/WMA/Disc Changer Control screen.



The available functions vary depending on the source used.

## Set Disc Name

 
Names a CD.

### 1 Play a CD you wish to name

### 2 Call the CD/Disc Changer Menu



### 3 Select the Set Name mode




The **Name Set** position varies depending on the disc you are playing.

### 4 Enter a name

 For character entry details, see <Character Entry> (see page 54).

### 5 Exit the Set Name mode



- You cannot name an MD or MP3/WMA disc.
- Number of discs that can be stored in memory  
Built-in disc player: 10  
External CD changer/ player:  
Varies depending on the CD changer/ player.  
Refer to the CD changer/ player manual.



## Directory List (during MP3/WMA play)

  The directory of an MP3/WMA disc are listed for quick search.

### 1 Call the MP3/WMA Menu




### 2 Start the Directory List

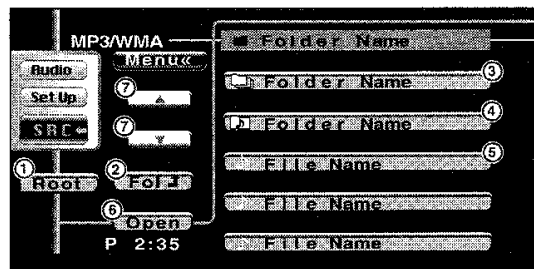

- ① Returns to the root directory.
- ② Displays the next higher level of hierarchy.
- ③ Displays a directory if the subdirectory has a directory. When you touch the directory, it opens.
- ④ Displays a directory if the subdirectory has files without a directory. When you touch the directory, it opens and songs in the directory are played.
- ⑤ Displays the MP3/WMA files. When you touch a file, its song is played back.
- ⑥ Plays the selected directory.
- ⑦ Scrolls the list.

### 3 Select a song

 

Display the desired song and touch the file display.

# CD/MP3/WMA/Disc Changer Play Control

English

 
## ID3/WMA TAG Display (during MP3/WMA play)

The ID3/WMA TAG information of MP3/WMA file is listed.

### 1 Call the MP3/WMA Menu



### 2 Display the ID3/WMA TAG

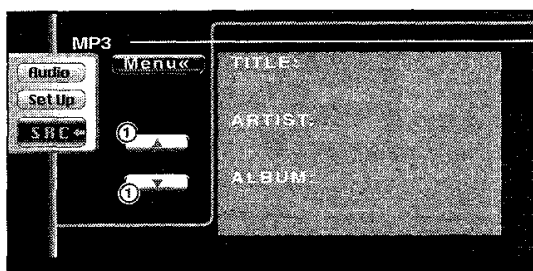

① Scrolls the list.


## Disc Select (during play by disc changer)

 The discs loaded on the disc changer are listed for quick disc selection.

### 1 Calls the Disc Changer Menu



### 2 Call the Disc Select Menu

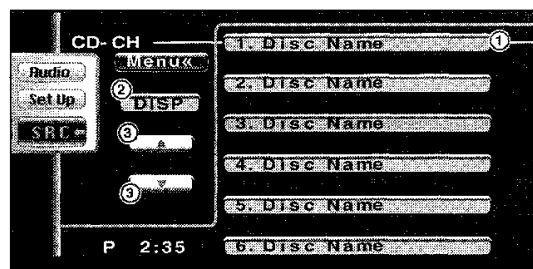


① Plays the displayed disc.

② Selects the Disc Name or Disc Text mode for text display.

③ Scrolls the list.

(It is not displayed when a disc changer having 6 or less discs is used.)

### 3 Select the desired disc

 

Touch the desired disc display.

## Direct Search

Searches for a disc or a song when its number is entered.

### During play on the built-in disc player

#### 1 Select the Direct Search mode



The following items can be searched directly each time it is pressed.

CD: Track number, Total play time  
MP3/WMA: Folder, File

#### 2 Enter a disc or track number



#### 3 Search

When searching for a song:



### During play on an external in disc player or disc changer

#### 1 Enter a disc or track number



#### 2 Search

When searching for a song:



When searching for a disc:



The operation ends automatically if you do not operate within 10 seconds.

## Mute Telephone

 
## Mute Telephone

When the telephone is called, the system is paused automatically.

### When the telephone is called...

The Phone Call ("CALL") screen appears, and system is paused.

#### Phone Call ("CALL") screen

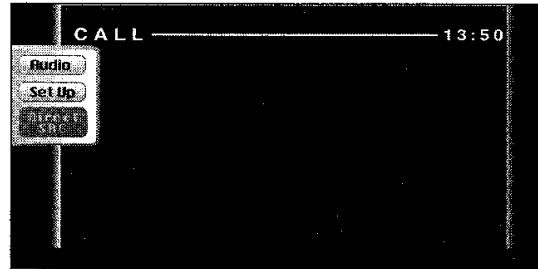

### If you continue to listen the source audio during phone call...



The system restarts to play while the phone call is continued.

### When the call ends...

Hang up the phone.

The system restarts to play.

## TV Control (with the optional accessory TV Tuner connected only)

Various control screens appear in the TV Source mode.

 
### Displaying the TV Picture screen

Various control screens appear in the TV Source mode.



Selects the TV Pictures.

TV Picture screen

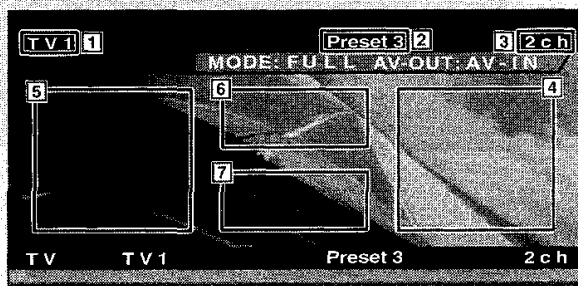

- 1 TV Band Number Display
- 2 Memory Number Display
- 3 Channel Number Display
- 4 Channel Up Area  
Increase the channel.
- 5 Channel Down Area  
Decrease the channel.
- 6 Band/Video Switch Area  
Switches to TV1, TV2, or VIDEO.
- 7 Information Display Button Area




- For TV picture selection and receiver key operations, see <DDX7015/7045 Basic Operations> (see page 8).
- The information display is cleared automatically after approximately 5 seconds. Also, the information can be displayed automatically when it is updated (see page 75).

### Displaying the Easy Control Panel

 The Control Panel is displayed in a floating position of the TV picture.



Displaying the Easy Control Panel

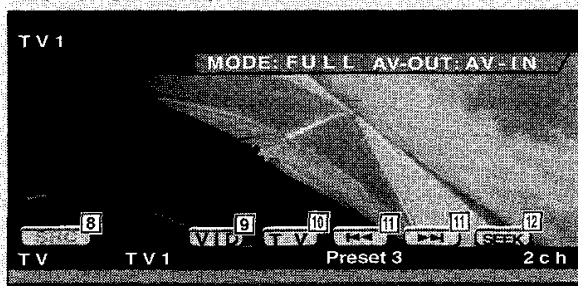

- 8 Switches the source.
- 9 Switches to Video (VIDEO).
- 10 Switches the TV band (to TV1 or TV2).
- 11 Calls up a channel.
- 12 Switches the Seek mode.  
(see page 36 for the <Seek Mode>)




The Easy Control Panel display is cleared when you touch the center of image display area.

## Displaying the TV Control screen

 You can tune in a TV station using various functions.



TV Control screen

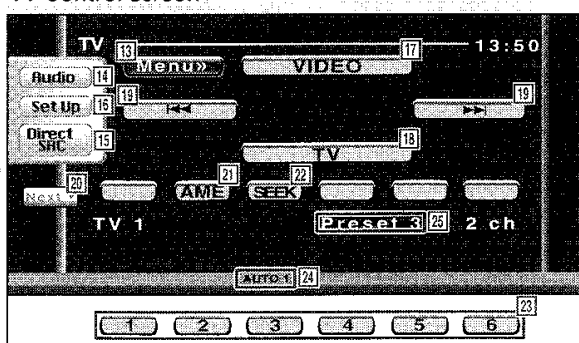


- [13] Calls the TV Menu.
- [14] Calls the Sound Effects Menu. (see page 84)
- [15] Displays the Source Select screen. (see page 55)
- [16] Calls the Setup Menu. (see page 57)
- [17] Switches to VIDEO.
- [18] Switches to TV1 or TV2.
- [19] Select a channel.  
Use the <Seek Mode> (see page 36) to change the channel tuning sequence.
- [20] Switches between [1] to [6] buttons and Function buttons to use.
- [21] Selects the Auto Memory mode.  
(see page 36 for the <Auto Memory>)
- [22] Switches the Seek mode.  
(see page 36 for the <Seek Mode>)
- [23] When [1] to [6] buttons appear, you can call up the channels from memory.  
For memory of broadcasting stations, see <Auto Memory> (see page 36) or <Manual Memory> (see page 36).
- [24] Seek Mode Indicator
- [25] Memory Number Display

## Displaying the TV Menu screen

 You can select menu options using various functions.



TV Menu screen

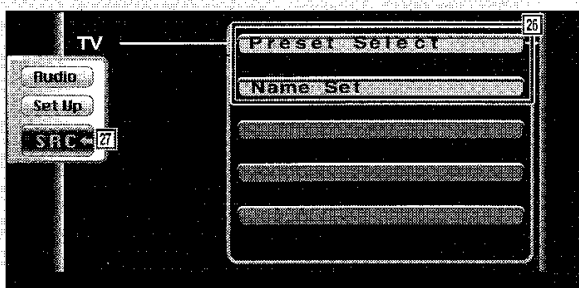

- [26] Selects options from various function menus.
- [27] Returns to the TV Control screen.



The available functions vary depending on the model used (the tuner specifications and the broadcasting system that can be received).

## Seek Mode

Sets a TV station selection.



If **SEEK** is not shown, touch **Next**.

The mode is switched each time you touch the button.



**AUTO 1** Tunes in a station with good reception automatically.

**AUTO 2** Tune in stations in memory one after another.

**MANUAL** Switches to the next channel manually.

## Auto Memory

Stores stations with good reception in memory automatically.

### 1 Select a band you wish to store in memory

 


### 2 Select the Auto Memory mode



If **AME** is not shown, touch **Next**.

### 3 Start Auto Memory



Touch or .

Auto Memory terminates when 6 stations are stored or when all stations are tuned in.




The operation ends automatically if you do not operate within 10 seconds.

## Manual Memory

 Stores the current receiving channel in memory.

### 1 Select a channel you wish to store in memory



### 2 Store in memory



If **1** to **6** are not shown, touch **Next**.

Continue to touch until the memory number appears.

## Preset Select

Lists and tunes in stations in memory one after the other.

 
 
### 1 Select a band you wish to call



### 2 Call the TV Menu



### 3 Call the Preset Select Menu

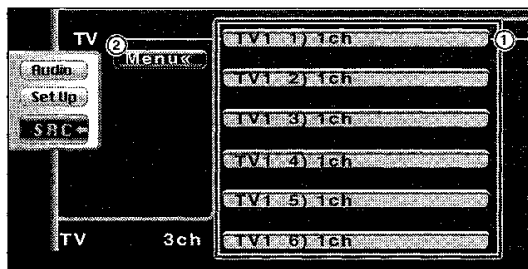

① Tunes in the displayed station.

If the station name is displayed if it has been set.


② Returns to the TV Menu.



## Set Station Name

 Names a station.

### 1 Select a station you wish to name



### 2 Call the TV Menu



### 3 Selects the Set Name mode



### 4 Enter a name

For character entry details, see <Character Entry> (see page 54).

### 5 Exit the Set Name mode



- You can store up to 20 stations in memory.
- You can set a station name only after you have applied the parking brake.

 
## Direct Search

Tunes in a station when its channel number is entered.

### 1 Selects the Direct Search mode



### 2 Enter a channel number



When you enter a channel number, signal reception starts.

Example: When you receive Channel 06



- Direct Search ends automatically if you do not operate within 10 seconds.

# SIRIUS Tuner Control

English

## SIRIUS Tuner Control <North American sales only> (with the optional accessory)

 
Various control screens appear in the SIRIUS Tuner source mode.

### Displaying the Easy Control Panel

The SIRIUS Tuner Control Panel is displayed in a floating position of the selected picture.



Display of Easy Control Panel

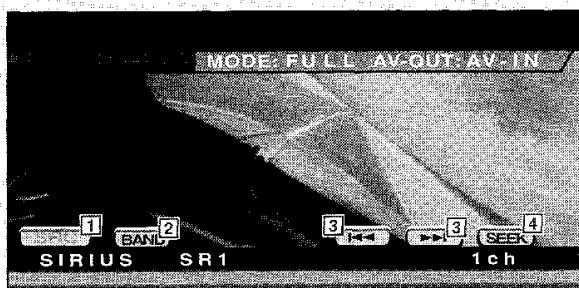

[1] Switches the source.

[2] Switches the band.

[3] Tunes in a station.

[4] Switches the Seek mode.

SEEK 1: Tunes channels one after the other.

SEEK 2: Selects channels in memory one after the other.




• For system key operations, see <DDX7015/7045 Basic Operations> (see page 8).

• The Easy Control Panel display is cleared when you touch the center of image display area.

## Displaying the SIRIUS Tuner Control screen



 SIRIUS Tuner Control screen

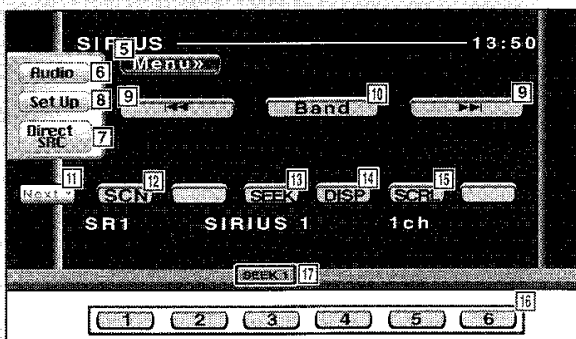


## Displaying the SIRIUS Tuner Menu

You can select menu options using various functions.



 SIRIUS Tuner Menu screen

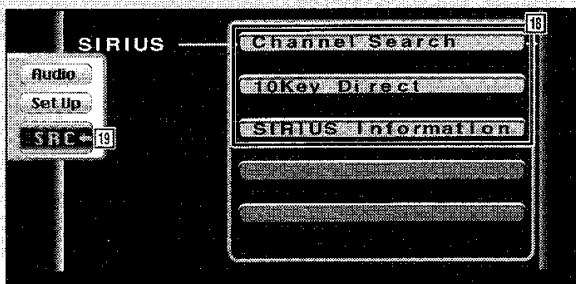

- 5 Calls the SIRIUS Tuner Menu.
- 6 Calls the Sound Effects Menu. (see page 84)
- 7 Displays the Source Select screen. (see page 55)
- 8 Calls the Setup Menu. (see page 57)
- 9 Tunes in a station.
- 10 Switches the band.
- 11 Switches between 1 to 6 buttons and Function button to use.
- 12 Starts or stops Channel Scan (that tunes channels one after the other).
- 13 Switches the Seek mode.  
SEEK 1: Tunes channels one after the other.  
SEEK 2: Selects channels in memory one after the other.
- 14 Changes the display from Song Title & Artist Name, Composer Name, Channel Name, to Category Name.
- 15 Scrolls the display text.
- 16 When 1 to 6 buttons appear, you can call up the channel from memory.  
For memory of channel stations, see <Channel Memory> (see page 40).
- 17 Seek Mode Indicator

- 18 Selects options from various function menus.
- 19 Returns to the SIRIUS Tuner Control screen.



For SIRIUS Tuner function details, see the Instruction Manual of SIRIUS Satellite Radio Tuner (optional accessory).

# SIRIUS Tuner Control

English

 
## Channel Search

The categories and channels are listed for your channel selection.

### 1 Call the SIRIUS Tuner Menu




### 2 Start Channel Searching



The category list appears.

 Category Selection screen

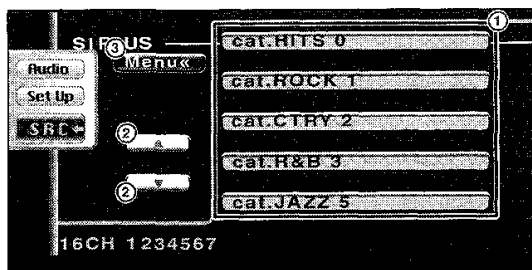


- ① Selects a category.
- ② Scrolls the list.
- ③ Returns to the SIRIUS Tuner Menu.

### 3 Select a category



 
The channel list of the selected category appears.

Channel Selection screen

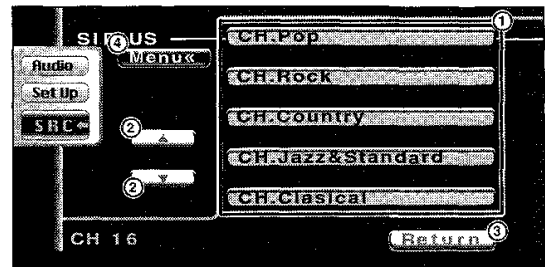

- ① Tunes in a channel.
- ② Scrolls the list.
- ③ Returns to the Category Selection screen.
- ④ Returns to the SIRIUS Tuner Menu.

### 4 Select a channel

 


The selected channel is tuned.

## Channel Memory

 Stores the current receiving channel in memory.

### 1 Select a channel you wish to store in memory



### 2 Store in memory



If ① to ⑥ are not shown, touch **Next**.  
Continue to touch until the memory number appears.

 
## Direct Channel Search

A channel is tuned when you enter its number.


### 1 Call the SIRIUS Tuner Menu



### 2 Display the Direct Search screen



Direct Search screen

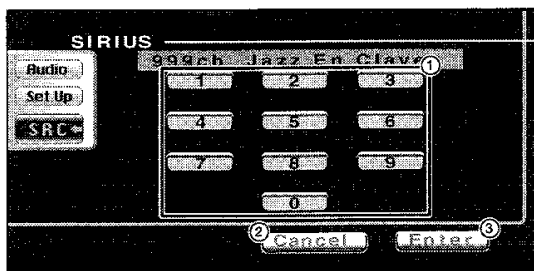 

- ① Enters a channel number.
- ② Returns to the SIRIUS Tuner Menu.
- ③ Tunes in a channel when you enter its number.

### 3 Enter a channel number



### 4 Tuning



 
## Information Display

The tuned program information is displayed.


### 1 Call the SIRIUS Tuner Menu



### 2 Display the Information screen



Information screen

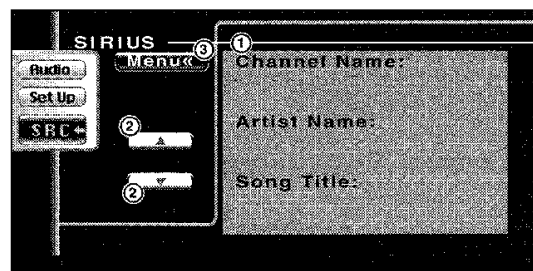 

- ① Displays the information (such as Channel Name, Category Name, Artist Name, Song Title, and Composer).
- ② Scrolls the information display.
- ③ Returns to the SIRIUS Tuner Menu.

# HD Radio Control

English

## HD Radio Control <North American sales only> (with the optional accessory HD Radio

 
Various control screens appear in the HD Radio Source mode.

### Displaying the Easy Control Panel

The HD Radio Control Panel is displayed in a floating position of the selected picture.



Displaying the Easy Control Panel

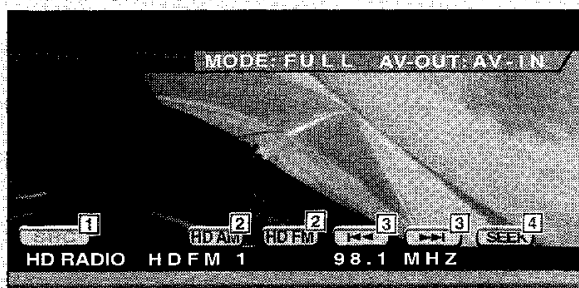

- 1 Switches the source.
- 2 Switches the band (HD FM1/2/3, HD AM).
- 3 Tunes in a station.
- 4 Switches the Seek mode.  
(see page 44 for the <Seek Mode>)




- For receiver key operations, see <DDX7015/7045 Basic Operations> (see page 8).
- The Easy Control Panel display is cleared when you touch the center of image display area.

## Displaying the HD Radio Control screen

 You can tune in a station using various functions.



HD Radio Control screen

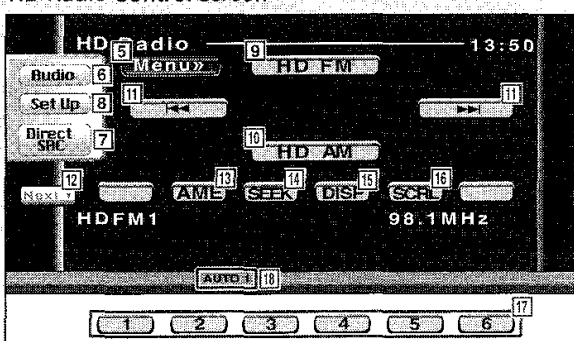


## Displaying the HD Radio Menu screen

You can select menu options using various functions.



 HD Radio Menu screen

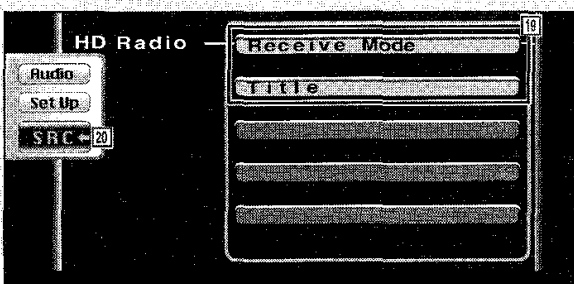

- [5] Calls the HD Radio Menu.
- [6] Calls the Sound Effects Menu. (see page 84)
- [7] Displays the Source Select screen. (see page 55)
- [8] Calls the Setup Menu. (see page 57)
- [9] Switches to the HD FM1/2/3 band.
- [10] Switches to the HD AM band.
- [11] Tunes in a station.  
Use the <Seek Mode> to change the frequency switching.
- [12] Switches between [1] to [6] buttons and Function buttons to use.
- [13] Selects the Auto Memory mode.  
(See page 44 for the <Auto Memory>)
- [14] Switches the Seek mode.  
(see page 44 for the <Seek Mode>)
- [15] Switches between Station Name and Song Title display modes.
- [16] Scrolls the display text.
- [17] When [1] to [6] buttons appear, you can call up the stations from memory.  
For memory of broadcasting stations, see <Auto Memory> (see page 44) or <Manual Memory> (see page 44).
- [18] Seek Mode Indicator
- [19] Selects options from various function menus.
- [20] Returns to the HD Radio Control screen.



For HD Radio function details, see the Instruction Manual of HD Radio tuner (optional accessory).

# HD Radio Control

English

## Seek Mode

Sets a station selection.



If **SEEK** is not shown, touch **Next**.

The mode is switched each time you touch the button.



Tunes in a station with good reception automatically.



Tune in stations in memory one after another.



Switches to the next channel manually.

## Auto Memory

Stores stations with good reception in memory automatically.

### 1 Select a band you wish to store in memory

 


### 2 Select the Auto Memory mode



If **AME** is not shown, touch **Next**.

### 3 Start Auto Memory



Touch  or .

Auto Memory terminates when 6 stations are stored or when all stations are tuned in.

## Manual Memory

Stores the current receiving station in memory.

### 1 Select a station you wish to store in memory



### 2 Store in memory



If **1** to **6** are not shown, touch **Next**.

Continue to touch until the memory number appears.



 
## Receive Mode

The digital or analog program is selected and received.

### 1 Call the HD Radio Menu



### 2 Call the Receive mode Menu

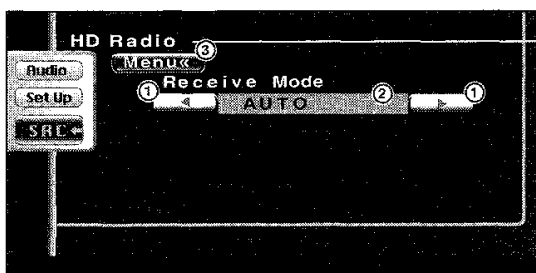

- ① Switches the Receive mode.
- ② Receive mode Display.
- ③ Returns to the HD Radio Menu.

### 3 Select the Receive mode



**AUTO:** Automatically switches between the Digital and Analog Receive modes depending on the broadcasting type. If programs are broadcasted in both modes, the digital program is received. Also, if a program is received in the Ball Game mode (the non-displayed broadcast program), the analog program is automatically received.

**DIGITAL:** Receives the digital program only.

**ANALOG:** Receives the analog program only.

 
## Title Display

An information about the received song is displayed.


### 1 Call the HD Radio Menu



### 2 Display the Title screen



Title screen

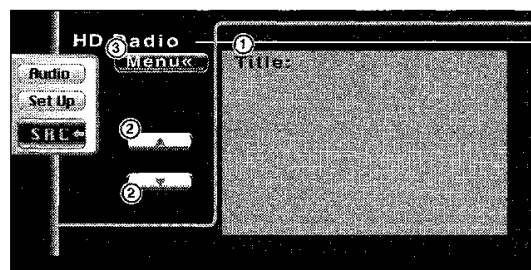 

- ① Displays the information.
- ② Scrolls the information display.
- ③ Returns to the HD Radio Menu.

# DAB Tuner control

English

## DAB Tuner control (with the optional accessory DAB tuner connected only)

 
Various control screens appear in the DAB Tuner source mode.

### Displaying the Easy Control Panel

The DAB Tuner Control Panel is displayed in a floating position of the selected picture.



Display of Easy Control Panel

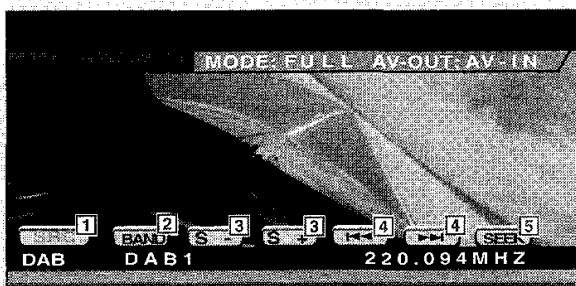

- 1 Switches the source.
- 2 Switches the band (to DAB1/2/3).
- 3 Selects a service.
- 4 Selects the Ensemble.
- 5 Switches the Seek mode.  
(see page 48 for the <Seek Mode>)




- For system key operations, see <DDX7015/7045 Basic Operations> (see page 8).
- The Easy Control Panel display is cleared when you touch the center of image display area.

## Displaying the DAB Tuner Control screen

 You can select the Ensemble and services using various functions.



DAB Tuner Control screen

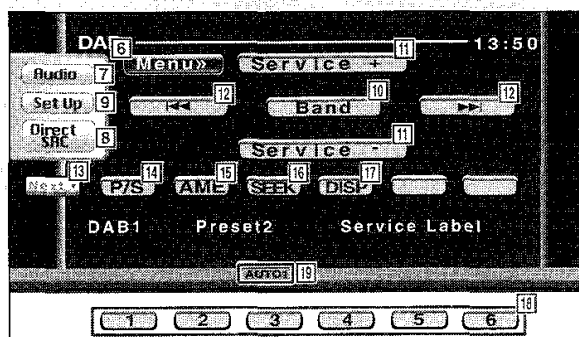


## Displaying the DAB Tuner Menu screen

You can select menu options using various functions.



 DAB Tuner Menu screen

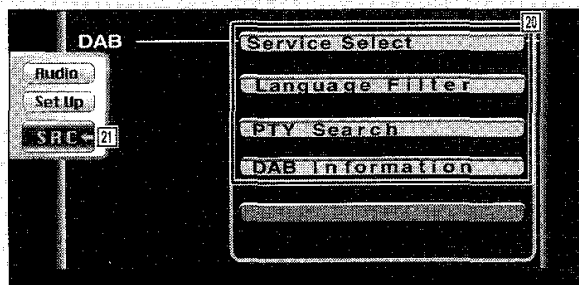

- [6] Calls the DAB Tuner Menu.
- [7] Calls the Sound Effects Menu. (see page 84)
- [8] Displays the Source Select screen. (see page 55)
- [9] Calls the Setup Menu. (see page 57)
- [10] Switches the band (to DAB1/2/3).
- [11] Selects a service.
- [12] Selects the Ensemble.
- [13] Switches between [1] to [6] buttons and Function button to use.
- [14] Selects the primary or secondary operation.
- [15] Selects the Auto memory mode. (see page 48 for the <Auto Ensemble memory>)
- [16] Switches the Seek mode. (see page 48 for the <Seek Mode>)
- [17] Changes the display between Ensemble label, PTY label, Component label, Region label, and Audio quality.
- [18] When [1] to [6] buttons appear, you can call a service from memory.
- [19] Seek Mode Indicator

- [20] Selects options from various function menus.
- [21] Returns to the DAB Tuner Control screen.



For DAB Tuner function details, see the Instruction Manual of DAB Tuner (optional accessory).

# DAB Tuner control

English

## Seek Mode

A service selection method can be set.



If **SEEK** is not shown, touch **Next**.

The mode display is switched each time you touch the button.



Tunes in an ensemble with good reception automatically.



Selects services in memory one after another.



Switches to the next channel manually.

## Auto Ensemble Memory

An ensemble with good reception is stored in memory automatically.

### 1 Select a band you wish to store in memory



### 2 Select the Auto Memory mode



If **AME** is not shown, touch **Next**.

### 3 Start Auto Memory



Touch  or .

Auto Memory terminates when 6 ensembles are stored or when all ensembles are tuned in.

## Service Preset Memory

The current receiving service is stored in memory.

### 1 Select a service you wish to store in memory



### 2 Store in memory



If **1** to **6** are not shown, touch **Next**.

 
 
## Service Select

The service list of the currently receiving ensemble is displayed for your selection.

### 1 Call the DAB Tuner Menu



### 2 Call the Service Select Menu

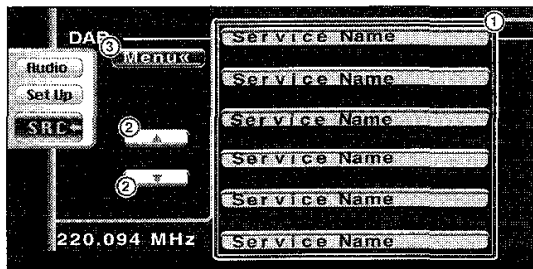

- ① Selects a service.
- ② Scrolls the service list.
- ③ Returns to the DAB Tuner Menu.

### 3 Select a service



 
## Language Filter

The languages are list for your selection.

### 1 Call the DAB Tuner Menu



### 2 Call the Language Filter Menu



- ① Selects a language.
- ② Searches for the selected language.
- ③ Returns to the DAB Tuner Menu.

### 3 Select a language you wish to use



### 4 Search for the language



# DAB Tuner control

English

 
 
## Search for Program Type

The services are received when you set its program type.

### 1 Call the DAB Tuner Menu



### 2 Call the PTY Search Menu

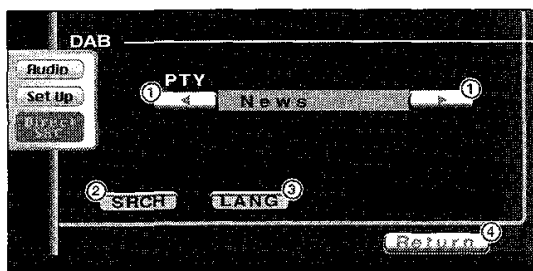


- ① Selects a program type.
- ② Searches for the program type.
- ③ Displays the Language select screen.
- ④ Returns to the DAB Tuner Menu.

### 3 Select a program type


 
## Select a Language

Display the Language select screen

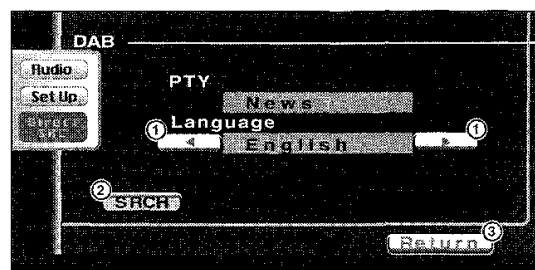

- ① Selects a Language.
- ② Searches for the program type.
- ③ Returns to the PTY Search Menu.

## Select a Language



### 4 Search for the program type



 
## DAB Information

The DAB information is displayed.

### 1 Call the DAB Tuner Menu



### 2 Display the DAB Information screen

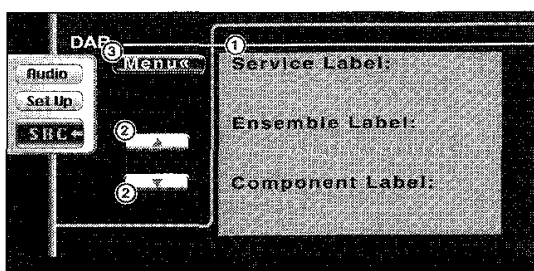

- ① Displays the DAB information (such as Service label, Ensemble label, Component label, Audio quality, Region label, and Dynamic label).
- ② Scrolls the information display.
- ③ Returns to the DAB Tuner Menu.

## DAB Announcement

When the Announcement you have turned on starts, any source is switched to the Announcement automatically.

### When the announcement starts...

The Announcement screen appears automatically.

Announcement screen



- ① Calls the Sound Effects Menu. (see page 84)
- ② Calls the Setup Menu. (see page 57)

# Weather Band Tuner Control

English

## Weather Band Tuner Control (with the optional accessory Weather Band Tuner)

 
Various control screens appear in the Weather Band Tuner source mode.

### Displaying the Easy Control Panel

The Weather Band Tuner Control Panel is displayed in a floating position of the selected picture.



Display of Easy Control Panel

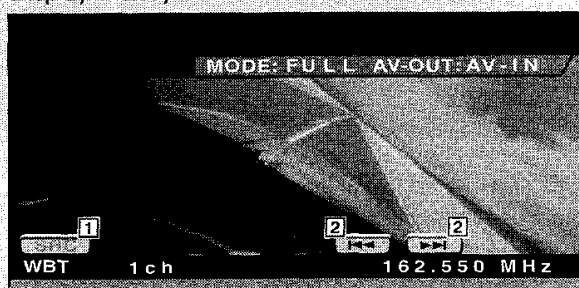

1 Switches the source.

2 Tunes in a station.




- For system key operations, see <DDX7015/7045 Basic Operations> (see page 8).
- The Easy Control Panel display is cleared when you touch the center of image display area.



## Displaying the Weather Band Tuner Control screen



 Weather Band Tuner Control screen

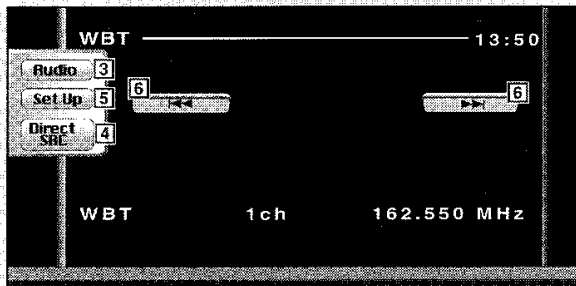

- 3 Calls the Sound Effects Menu. (see page 84)
- 4 Displays the Source Select screen. (see page 55)
- 5 Calls the Setup Menu. (see page 57)
- 6 Tunes in a station.


# Character Entry

 English

## How To Use the Character Entry screen

When you select the Set Disc Name mode or others, the following screen appears for character entry.

Character Entry screen

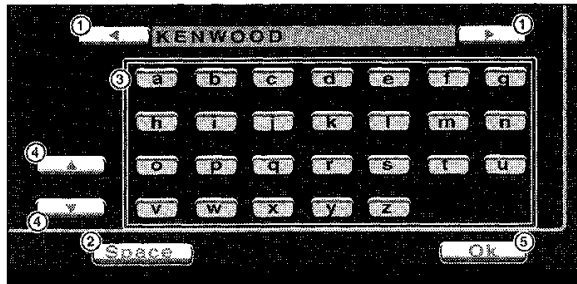

- ① Shifts the cursor.
- ② Enters a space.  
If you erase a character, locate the cursor on it and touch this button.
- ③ Enters characters.
- ④ Scrolls up or down the character button display.
- ⑤ Exits the Character Entry mode and returns to the previous screen.



You can enter characters only after you have applied the parking brake.

# Source Select

## Source Select

 
The source you wish to listen to can be selected quickly.

### Displaying the Control screen



Press this key several times until the Control screen appears.

Control screen




The Source Select screen can be displayed from the control screen of any source.

### Displaying the Source Select screen



 Source Select screen

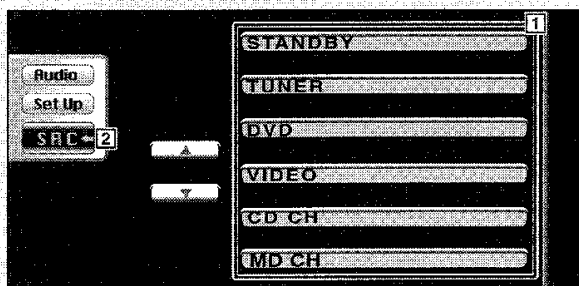

- 1 Select the source.
- 2 Returns to the Control screen previously displayed.

# Adjusting the Monitor Display Position and Quality

English

## Adjusting the Monitor Display Position and Quality

 
You can adjust the position and picture quality of the monitor.

### Displaying the Screen Control screen

You can adjust the picture quality using the following keys.



Screen Control screen

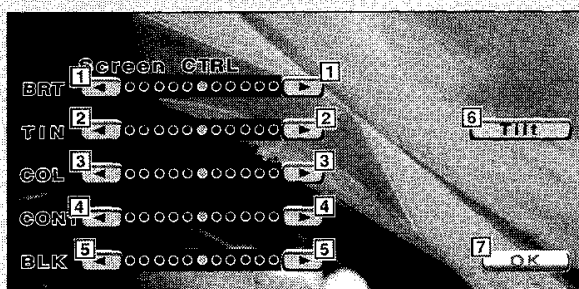


### Displaying the Tilt Adjust screen

You can set the monitor tilt.



 Tilt Adjust screen

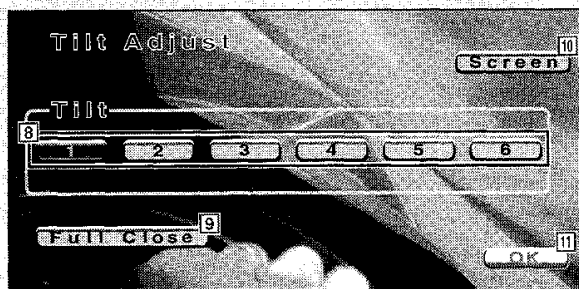

- 1 Brightness Control
- 2 Tint Control  
Displayed for an NTSC system image on TV or Video.
- 3 Color Control  
Displayed on the TV and Video screen only.
- 4 Contrast Control
- 5 Black Level Adjustment
- 6 Displays the Adjust Monitor Position screen.  
(see <Displaying the Tilt Adjust screen>, page 56)
- 7 Returns to the previous screen.



The Screen Control screen is displayed only when you have applied the parking brake.

- 8 Monitor Tilt Adjustment
- 9 The monitor fully closes.
- 10 Returns to the Screen Control screen.
- 11 Returns to the previous screen.



If you turn the power off, the panel will close. However, if you turn the power back on, it will return to the adjusted tilt.

# Setup Menu

## Setup Menu

You can set up various receiver parameters.

### Displaying the Control screen



Press this key several times until the Control screen appears.

Control screen

 


You can call the same Setup Menu for the Control screen of each source.

### Displaying the Setup Menu screen



Setup Menu screen

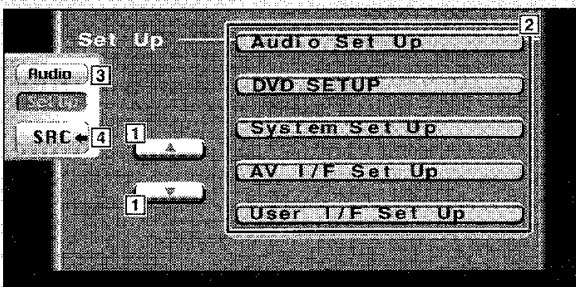

- 1 Scrolls the Setup Menu.
- 2 Calls each Setup Menu.
- 3 Calls the Sound Effects Menu. (see page 84)
- 4 Returns to the Control screen of the previous source.



- Your setup on the Sound Effects menu is adjusted automatically according to your <Audio Set Up> (see page 58) on the Setup menu. We recommend you to complete the <Audio Set Up> first, then set up the <Sound Effects menu>.
- The available functions vary depending on the model used (the tuner specifications and the broadcasting system that can be received).

# Setup Menu

English

## Audio Set Up

 
You can setup a speaker network, etc.

### Displaying the Audio Set Up screen



Audio Set Up

Speaker setup screen

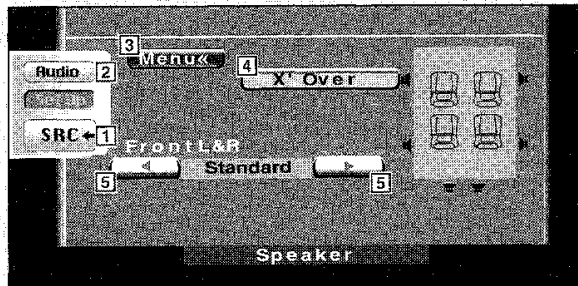

- 1 Returns to the Control screen of the previous source.
- 2 Calls the Sound Effects Menu. (see page 84)
- 3 Calls the Setup Menu.
- 4 Displays the X'Over setup screen. (see page 59)
- 5 Sets up the front speaker type to fine-tune for the optimal equalizer curves.  
Standard: Setup for general diameter speakers  
Narrow: Setup for small diameter speakers  
Middle: Setup for small diameter woofer  
Wide: Setup for large diameter woofer


## Crossover Network Setup

 You can set a crossover frequency of speakers.



**X' Over** (P 58 [4])

X'Over setup screen

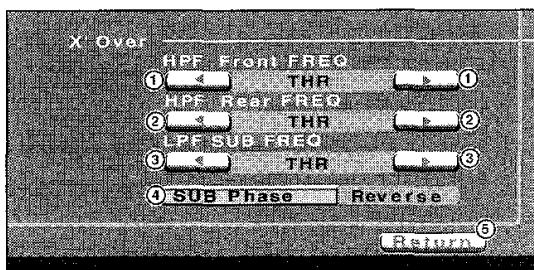

- ① Sets a Front High Pass Filter frequency.  
You can select any of the following frequency.  
Through, 40, 60, 80, 100, 120, 150, 180, 220 Hz
- ② Sets a Rear High Pass Filter frequency.  
You can select any of the following frequency.  
Through, 40, 60, 80, 100, 120, 150, 180, 220 Hz
- ③ Sets a Sub woofer Low Pass Filter frequency.  
You can select any of the following frequency.  
50, 80, 120, Through Hz
- ④ Sets the phase of subwoofer output.  
The phase is reversed 180 degrees when set to  
"Reverse".
- ⑤ Returns to the Speaker setup screen.

# Setup Menu

English

## Audio Set Up (with the optional accessory DSP unit connected only)

You can set up more detailed settings by connecting the optional accessory DSP

 
### Displaying the Car Type Set Up screen

If your vehicle type is selected, the Digital Time Alignment is set automatically (for timing adjustment of sound output for each channel) to have the highest surround effects.



Audio Set Up

Car Type Set Up screen

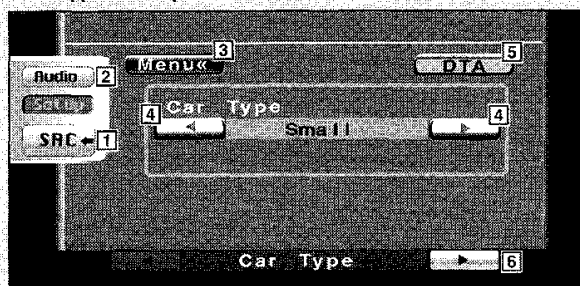

- 1 Returns to the Control screen of the previous source.
- 2 Calls the Sound Effects Menu. (see page 84)
- 3 Calls the Setup Menu.
- 4 Sets up the car type you use together with this unit.
- 5 Displays the DTA (Digital Time Alignment) Setup screen. (see page 62)  
You can adjust the digital time alignment that was set automatically when you selected the car type.
- 6 Displays the Speaker Set Up screen.



You cannot set up "Car Type" when "Position Setting" (see page 92) is "All".




unit.

## Displaying the Speaker Set Up screen

 When the speaker type and size are set, the speaker crossover network and equalizer curve are set automatically.



Speaker Set Up screen

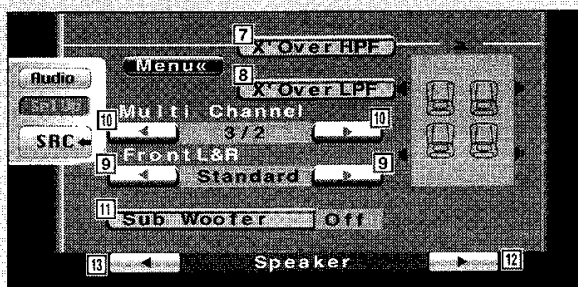


## Displaying the Channel Level screen

You can set the volume at each setup position.



 Channel Level screen

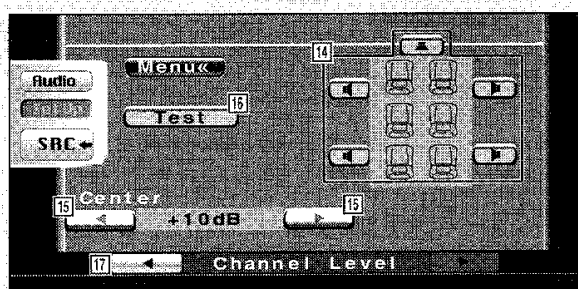

7 Displays the X'over (HPF) screen.  
(See <High Pass Filter Setup>, page 64)

8 Display the X'over (LPF) screen.  
(See <Low Pass Filter Setup>, page 64)

9 Sets up the front speaker type to fine-tune for the optimal equalizer curves.  
Standard: Setup for general diameter speakers  
Narrow: Setup for small diameter speakers  
Middle: Setup for small diameter woofer  
Wide: Setup for large diameter woofer

10 Select the speakers for Multi-channel sounds.  
"3/2": Center speaker, Front speaker, Rear speaker  
"2/2": Front speaker, Rear speaker  
"3/0": Center speaker, Front speaker  
"2/0": Front speaker

11 Set the use or no use of Sub Woofer.

12 Displays the Channel Level Setup screen.

13 Displays the Car Type Set Up screen.



- "X'Over HPF" and "X'Over LPF" can be set only when "Sub Woofer" is set to "On".
- To turn the Center speaker on in the "Multi channel" settings, turn "Dolby Pro Logic" (see page 91) on.

14 Selects a speaker to be set.  
(see <Channel Level>, page 62)

15 Sets the speaker volume.  
(see <Channel Level>, page 62)

16 Starts or stops test signal tone output for setup check.

17 Displays the Speaker Set Up screen.



- Your setup on the <Sound Effects Menu> is adjusted automatically to get the best sound effects according to the car type and speaker you have set on the <Audio Set Up> (see page 60). We recommend you to complete the <Audio Set Up> first, then set up the <Sound Effects Menu>.
- You can fine-adjust the automatic set value by <DTA Setup> (see page 62), <Crossover Network Setup> (see page 59), or <Parametric Equalizer> (see page 88)
- Stop the test signal tone if you have finished setting up the Channel Level. If you leave the test signal tone on, you may not be able to set up other settings.

# Setup Menu

English

 
## Channel Level

Set the volume at each setup position.

### 1 Select a speaker you wish to adjust



Channel Level setup screen

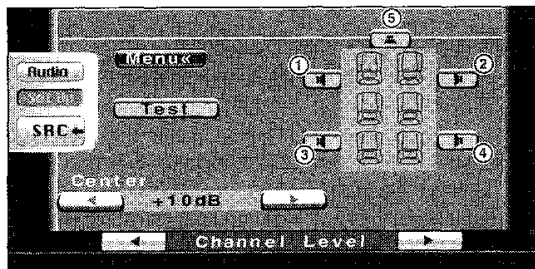

- ① Left front speaker
- ② Right front speaker
- ③ Left rear speaker
- ④ Right rear speaker
- ⑤ Center speaker

### 2 Adjust the volume



 
## DTA Setup

Manually set the sound output timing of each channel.

### 1 Display the DTA Setup screen




DTA Setup screen

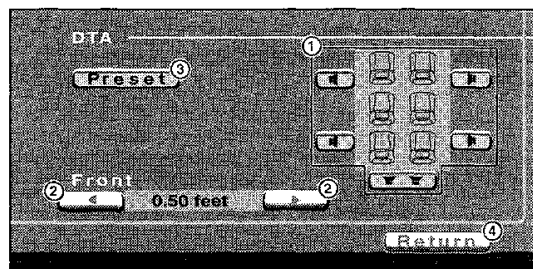


- ① Selects a speaker to be adjusted.
- ② Sets the distance between the selected speakers to adjust delay time.
- ③ Stores the adjusted status in memory or calls it from memory.
- ④ Returns to the Car Type Set Up screen.

### 2 Select a speaker you wish to adjust

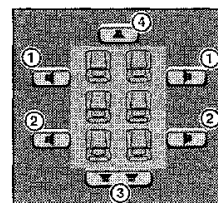 

- ① Front speaker
- ② Rear speaker
- ③ Subwoofer
- ④ Center speaker

### 3 Set a delay time

 

The speakers are virtually moved to the desired distance.

When the values of center speaker and front speakers increase, they are virtually moved forward. When the values of rear speakers and subwoofer increase, they are virtually moved backward.

### Store or call your setup into/from memory

#### To store your setup in memory



Continue to touch more than 2 seconds.

#### To call your setup from memory



# Setup Menu

 
English

## High Pass Filter Setup

You can manually set a High Pass Filter of Crossover Network.



**X-Over HPF** (P61) **[7]**

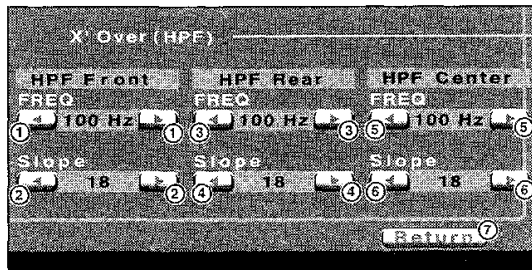

- ① Sets a crossover frequency of Front High Pass Filter.
- ② Sets a crossover slope of Front High Pass Filter.
- ③ Sets a crossover frequency of Rear High Pass Filter.
- ④ Sets a crossover slope of Rear High Pass Filter.
- ⑤ Sets a crossover frequency of Center High Pass Filter.
- ⑥ Sets a crossover slope of Center High Pass Filter.
- ⑦ Returns to the Speaker Set Up screen.




"HPF Center" can be set only when "Multi Channel" (see page 61) is set to "3/2" or "3/0".

## Low Pass Filter Setup

 You can manually set a Low Pass Filter of Crossover Network.



**X-Over LPF** (P61) **[8]**

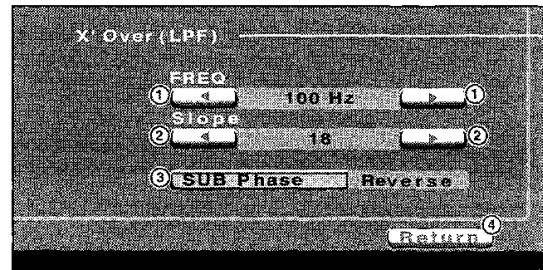

- ① Sets a crossover frequency of Low Pass Filter.
- ② Sets a crossover slope of Low Pass Filter.
- ③ Sets the phase of subwoofer output.  
The phase is reversed 180 degrees when set to "Reverse".
- ④ Returns to the Speaker Set Up screen.



# Setup Menu

English

## DVD Setup

You can set up the DVD play.

### Displaying the DVD SETUP 1 screen



DVD SETUP

DVD SETUP 1 screen



1 Returns to the Control screen of the previous source.

2 Calls the Sound Effects Menu. (see page 84)

3 Calls the Setup Menu.

4 Selects a disc menu language.\*1  
(See <Language Setup>, page 68)

5 Selects a subtitle language.\*1  
(See <Language Setup>, page 68)

6 Selects an audio language.\*1  
(See <Language Setup>, page 68)

7 Sets the dynamic range.\*2 (Wide)  
The dynamic range is reduced by changing from "Wide" to "Normal" and from "Normal" to "Midnight". You can easily listen to a small sound when the dynamic range is narrow.  
This is effective only when you are using a Dolby Digital software.

8 Displays the DVD SETUP 2 screen.

 


If **DVD SETUP** is not shown, touch or to display it.

## Displaying the DVD SETUP 2 screen



DVD SETUP 2 screen

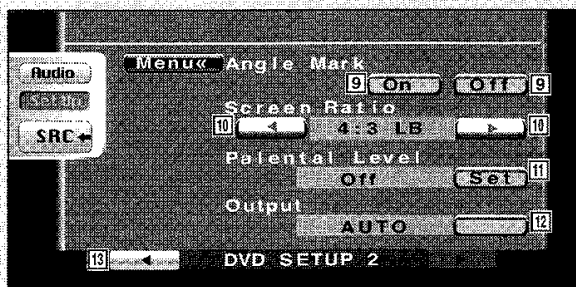

- 9 Sets an angle mark display. ( On)
- 10 Selects the screen display mode.\*1 ( 16:9)  
 "16:9": Displays wide pictures.  
 "4:3 LB": Displays wide pictures in the Letter Box format (having black stripes at the top and bottom of screen).  
 "4:3 PS": Displays wide pictures in the Pan & Scan format (showing pictures cut at the right and left ends).
- 11 Displays the Parental Lock screen.\*1 ( OFF)  
 (See <Parental Level Setup>, page 69)
- 12 Keep "AUTO" to use.
- 13 Displays the DVD SETUP 1 screen.



\*1 Disabled when a DVD is being played.

\*2 Disabled when the Zone function is On.

# Setup Menu

 
English

## Language Setup

Select a language you use for the speech and menus.

### 1 Display the Language Setup screen

See <Displaying the DVD SETUP 1 screen> (see page 66) and select a language you wish to use.

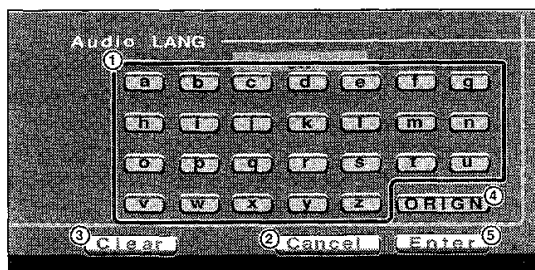

- ① Enters a language code.
- ② Cancels the language setup and returns to the DVD SETUP 1 screen.
- ③ Clears the language code.
- ④ Sets the original audio language.  
(It appears during audio language setup.)
- ⑤ Sets the language and returns to the DVD SETUP 1 screen.  
(It appears after you have entered a language code.)

### 2 Enter a language code

See the Language Code Table shown at right to select the desired language.

### 3 Set the language you use



Enter

Language Code Table

 
Abbreviation	Language	Abbreviation	Language
aa	Afar	lv	Latvian, Lettish
ab	Abkhazian	mg	Malagasy
af	Afrikaans	mi	Maori
am	Amharic	mk	Macedonian
ar	Arabic	ml	Malayalam
as	Assamese	mn	Mongolian
ay	Aymara	mo	Moldavian
az	Azerbaijani	mr	Marathi
ba	Bashkir	ms	Malay
be	Byelorussian	mt	Maltese
bg	Bulgarian	my	Burmese
bh	Bihari	na	Nauru
bi	Bislama	ne	Nepali
bn	Bengali, Bangla	nl	Dutch
bo	Tibetan	no	Norwegian
br	Breton	oc	Occitan
ca	Catalan	om	(Afan) Oromo
co	Corsican	or	Oriya
cs	Czech	pa	Punjabi
cy	Welsh	pl	Polish
da	Danish	ps	Pashto, Pushto
de	German	pt	Portuguese
dz	Bhutani	qu	Quechua
el	Greek	rm	Rhaeto-Romance
en	English	rn	Kirundi
eo	Esperanto	ro	Romanian
es	Spanish	ru	Russian
et	Estonian	rw	Kinyarwanda
eu	Basque	sa	Sanskrit
fa	Persian	sd	Sindhi
fi	Finnish	sg	Sangho
fj	Fiji	sh	Serbo-Croatian
fo	Faroese	si	Singhalese
fr	French	sk	Slovak
fy	Frisian	sl	Slovenian
ga	Irish	sm	Samoan
gd	Scots Gaelic	sn	Shona
gl	Galician	so	Somali
gn	Guarani	sq	Albanian
gu	Gujarati	sr	Serbian
ha	Hausa	ss	Siswati
hi	Hindi	st	Sesotho
hr	Croatian	su	Sundanese
hu	Hungarian	sv	Swedish
hy	Armenian	sw	Swahili
ia	Interlingua	ta	Tamil
ie	Interlingue	te	Telugu
ik	Inupiak	tg	Tajik
in	Indonesian	th	Thai
is	Icelandic	ti	Tigrinya
it	Italian	tk	Turkmen
iw	Hebrew	tl	Tagalog
ja	Japanese	tn	Setswana
ji	Yiddish	to	Tongan
jw	Javanese	tr	Turkish
ka	Georgian	ts	Tsonga
kk	Kazakh	tt	Tatar
kl	Greenlandic	tw	Twi
km	Cambodian	uk	Ukrainian
kn	Kannada	ur	Urdu
ko	Korean	uz	Uzbek
ks	Kashmiri	vi	Vietnamese
ku	Kurdish	vo	Volapuk
ky	Kirghiz	wo	Wolof
la	Latin	xh	Xhosa
ln	Lingala	yo	Yoruba
lo	Laotian	zh	Chinese
lt	Lithuanian	zu	Zulu



## Parental Level Setup


Sets a parental level.

### 1 Display the Parental Level code number screen

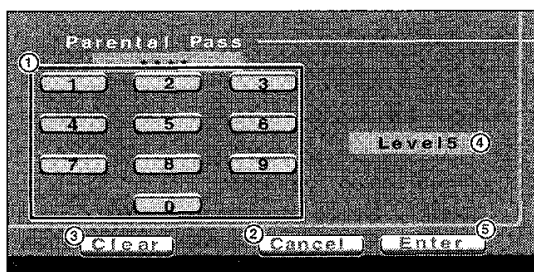


- ① Enters a code number.
- ② Cancels the current setup and returns to the DVD SETUP 2 screen.
- ③ Clears the code number.
- ④ Displays the present parental lock level.
- ⑤ Determines the code number and displays the Parental Level Setup screen.

### 2 Enter the code number

 

- The number you enter first is set as your code number.
- You can clear the code number by pressing the Reset button.

### 3 Display the Parental Level Setup screen

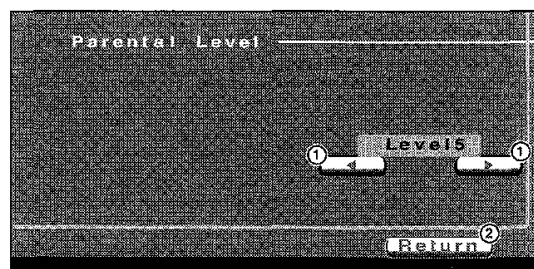 

- ① Sets a parental level.
- ② Returns to the DVD SETUP 2 screen.

### 4 Set a parental level



### 5 Enter the parental level setup



- If a disc has a higher parental lock level, the audience needs to enter the code number.
- The parental lock level varies depending on a loaded disc.
- If a disc has no parental lock, any audience can play it back even when you have set the parental lock.

# Setup Menu

English

## System Setup

 
You can set up the system parameters.

### Displaying the System Set Up 1 screen



System Set Up

System Set Up 1 screen

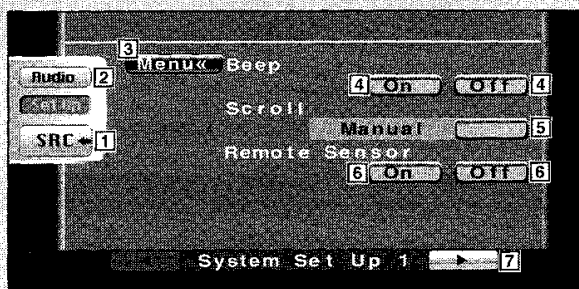

- 1 Returns to the Control screen of the previous source.
- 2 Calls the Sound Effects Menu. (see page 84)
- 3 Calls the Setup Menu.
- 4 Turns the key touch tone On or Off. (☑ On)
- 5 Allows scrolling of text display on the Source Control screen. (☑ Auto)  
"Auto": Scrolls the screen automatically.  
"Manual": Allows you to scroll the screen manually.
- 6 Selects a remote control signal. (☑ On)  
When turned "Off", the remote control of TV reception is rejected.
- 7 Displays the System Set Up 2 screen.




If **System Set Up** is not shown, touch **▲** or **▼** to display it.

## Displaying the System Set Up 2 screen



 System Set Up 2 screen

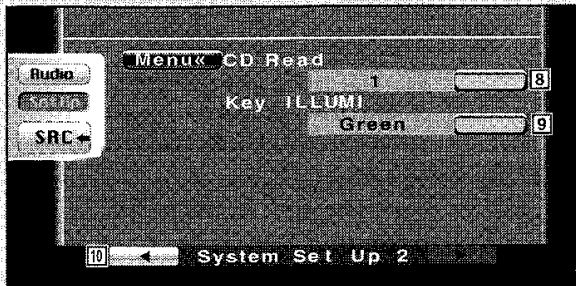

- 8 Sets a music CD playback. ( ☒ 1)

"1": Automatically recognizes and plays back an MP3/WMA disc, a DVD or a music CD.

"2": Forcibly plays back a disc as a music CD.

Select "2" if you wish to play a music CD having a special format or if you cannot play a disc in the "1" position.



- You cannot play an MP3/WMA/VCD disc in the "2" position. Also, you may not play some music CDs in the "2" position.

- Your setup is disabled when the disc is being played.

- 9 Selects an illumination color of receiver keys.

( ☒ Red)

"Green": Green

"Red": Red

- 10 Displays the System Set Up 1 screen.

# Setup Menu

English

## AV Interface

 
You can set audio and visual (AV) interface parameters.

### Displaying the AV I/F 1 screen



AV I/F Set Up

AV I/F 1 screen

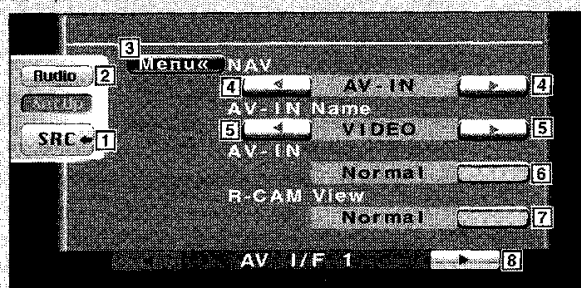

- 1 Returns to the Control screen of the previous source.
- 2 Calls the Sound Effects Menu. (see page 84)
- 3 Calls the Setup Menu.
- 4 Selects a navigation system connection. (☒ RGB)  
 "RGB": Allows the Kenwood's Navigation System to connect via its interface cable.  
 "AV-IN": Allows a third-party navigation system to connect via the AV INPUT port.  
 "OFF": Must be used if no navigation system is connected. (The navigation display is cancelled when the AV source is switched.)
- 5 Sets a name to be displayed when you select a system that is connected via the AV INPUT port. (☒ VIDEO)
- 6 Sets an image display of the system that is connected via the AV INPUT port. (☒ Normal)  
 "Normal": When the image source is switched, an image entered via the AV INPUT port is displayed.  
 "AUTO": When an image signal is entered via the AV INPUT port, this image is displayed.
- 7 Sets how the rear camera image is displayed.  
 "Reverse": Displays with left and right reversed.  
 "Normal": Displays as it is.
- 8 Displays the AV I/F 2 screen.



If you have set the navigation system connection to "AV-IN", the display is fixed to "NAV".



"R-CAM View" can be set only when "AV-IN Name" is set to "R-CAM".




If **AV I/F Set Up** is not shown, touch or to display it.

## Displaying the AV I/F 2 screen



 AV I/F 2 screen

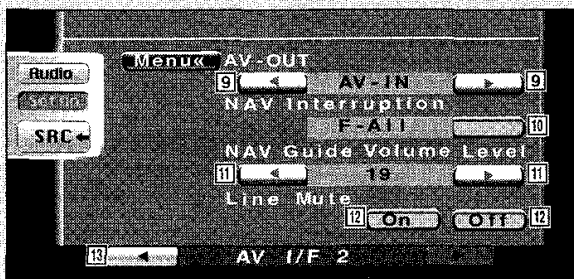

- 9 Selects an AV source to be output at the AV OUTPUT port. ( AV-IN )



If you select DVD as a source when the optional accessory DSP unit is connected, no DVD sound is output to the AV output port.

- 10 Selects speakers used for voice guidance of the navigation system. ( F-Left )

"F-Left": Uses the front left side speaker for voice guidance.

"F-Right": Uses the front right side speaker for voice guidance.

"F-All": Uses both front speakers for voice guidance.

- 11 Adjusts the volume for voice guidance of the navigation system. ( 19 )

- 12 Mutes the volume during voice guidance of the navigation system. ( On )

When turned "On", the volume level drops for voice guidance.

- 13 Displays the AV I/F 1 screen.

# Setup Menu

English

## User Interface

 
 
You can set up user interface (IF) parameters.

### Displaying the User I/F 1 screen



User I/F Set Up

User I/F 1 screen

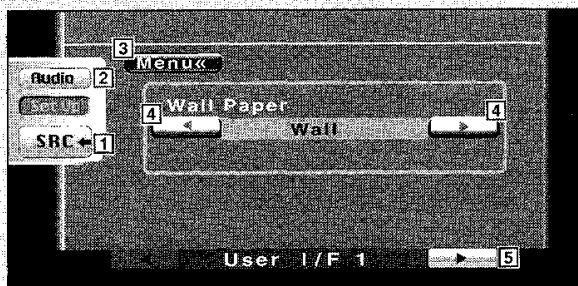

- 1 Returns to the Control screen of the previous source.
- 2 Calls the Sound Effects Menu. (see page 84)
- 3 Calls the Setup Menu.
- 4 Switches the wall paper.
- 5 Displays the User I/F 2 screen.




If **User I/F Set Up** is not shown, touch or to display it.

## Displaying the User I/F 2 screen



 User I/F 2 screen

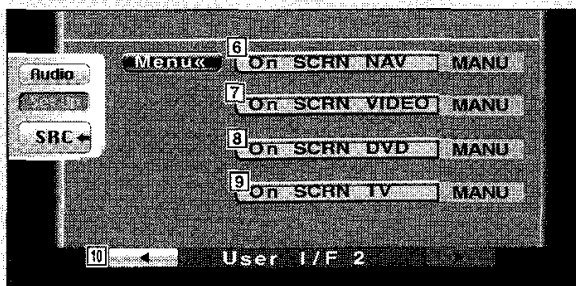

- 6 Sets an on-screen display of the navigation screen. (☒ Auto)  
If you set to "Auto", an information is displayed for 5 seconds when updated.
- 7 Sets an on-screen display of the video playback screen. (☒ Auto)  
If you set to "Auto", an information is displayed for 5 seconds when updated.
- 8 Sets an on-screen display of the DVD playback screen. (☒ MANU)  
If you set to "Auto", an information is displayed for 5 seconds when updated.
- 9 Sets an on-screen display of the TV screen. (☒ Auto) (optional accessory) (with the optional accessory TV tuner connected only)  
If you set to "Auto", an information is displayed for 5 seconds when updated.
- 10 Displays the User I/F 1 screen.

# Setup Menu

English

## Touch Panel Adjust

 
You can adjust the touch panel operations.

### 1 Display the Touch Panel Adjust screen



Touch Adjust

If **Touch Adjust** is not shown, touch  or  to display it.

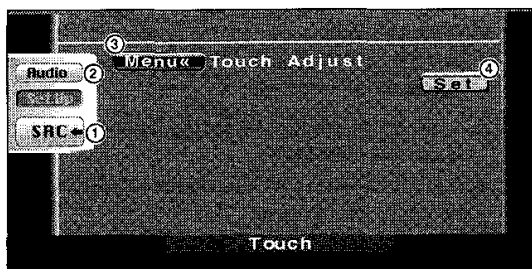


- ① Returns to the Control screen of the previous source.
- ② Calls the Sound Effects Menu. (see page 84)
- ③ Calls the Setup Menu.
- ④ Allows you to start touch panel adjustment.

### 2 Start to adjust the touch panel



 
Set

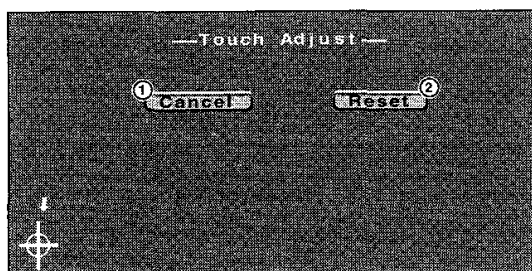

- ① Cancels the adjustment and returns to the Touch Panel Adjust screen.
- ② Resets to the initial status.

### 3 Adjustment



Touch the center of left lower and right upper  when requested.



# Clock

 
Adjusts the clock time

## 1 Display the Clock Screen



**Clock Adjust**

If **Clock Adjust** is not shown, touch  or  to display it.

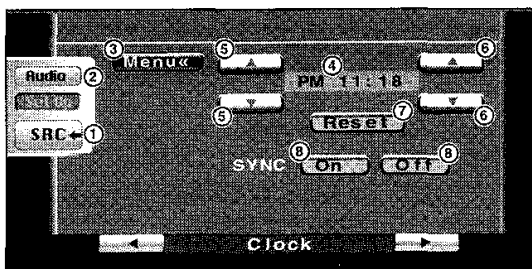

- ① Returns to the Control screen of the previous source.
- ② Calls the Sound Effects Menu. (see page 84)
- ③ Calls the Setup Menu.
- ④ Clock time display.
- ⑤ Adjusts hours.
- ⑥ Adjusts minutes.
- ⑦ Sets "00" minute.  
Setup examples: 3:00~3:29 → 3:00  
3:30~3:59 → 4:00
- ⑧ Sets the clock time in synchronous with the time data sent from the RDS station. (☒ Off)  
When turned "On", the synchronous mode starts and the clock cannot be adjusted manually.

## 2 Adjust the clock time



# Setup Menu

English

## Security Code Setup

You can set a security code to protect your receiver system against theft.

When the Security Code function is activated, the code can't be changed and the function can't be released.

 
Note, the Security Code can be set as the 4 digit number of your choice.

### 1 Display the Security Code Setup screen



Security Set Up

If **Security Set Up** is not shown, touch or to display it.

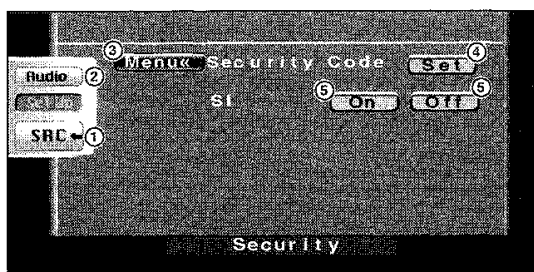


- ① Returns to the Control screen of the previous source.
- ② Calls the Sound Effects Menu. (see page 84)
- ③ Calls the Setup Menu.
- ④ Allows you to start security code registration.
- ⑤ Turns the SI function On or Off.  
If turned "On", the burglar alarm lamp flashes when the vehicle ignition is off.

If you have already completed the code registration, the **Set** is not displayed.

### 2 Start the security code registration



 Set

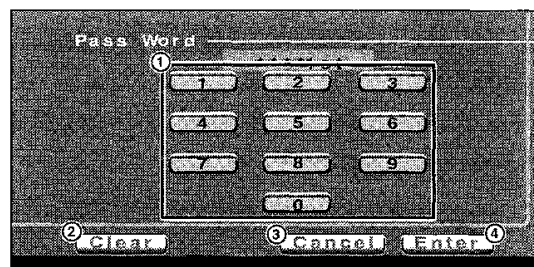

- ① Enters a security code.
- ② Clears your entry.
- ③ Cancels the registration and returns to the Security Code Setup screen.
- ④ Enters the security code.

### 3 Enter a security code



0 — 9

Input a four-digit number.

### 4 Register your security code



Enter

### 5 Reenter the security code

Reenter the same security code as that you have entered in Step 3 for confirmation.



If you enter a different security code, the screen returns to Step 3 (for the first code entry).

### 6 Register the security code again



Enter

 
Your security code has been registered.

If you press the Reset button or if you disconnect your Receiver from the battery after the code registration, you need to enter the registered security code.

See below for details.

**If you have pressed the Reset button or if you have disconnected the Receiver from battery...**

**1 Enter the correct security code**



You must enter the same security code as that you have entered in Step 3 above.

**2 Enter the security code**



Now, you can use your Receiver.

# Setup Menu

English

## SIRIUS Setup <North American sales only> (with the optional accessory SIRIUS Tuner connected only)

 
You can display the SIRIUS ID.

### Displaying the SIRIUS Set Up screen



SIRIUS Set Up

SIRIUS Set Up screen

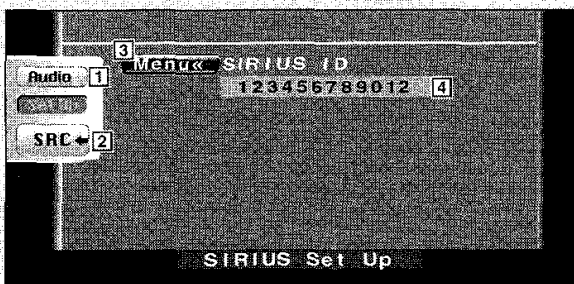

- 1 Calls the Sound Effects Menu. (see page 84)
- 2 Returns to the Control screen of the previous source.
- 3 Calls the Setup Menu.
- 4 Displays the SIRIUS ID



If **SIRIUS Set Up** is not shown, touch **▲** or **▼** to display it.

## AMP Control (with the optional accessory LX Power AMP connected only)

 
Sets the power amp connected via the LX bus.

### Displaying the AMP Control screen





AMP Control

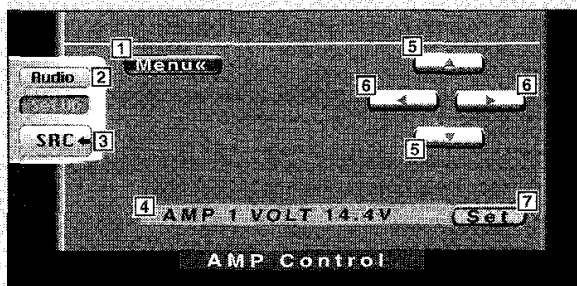AMP Control screen



- 1 Calls the Setup Menu.
- 2 Calls the Sound Effects Menu. (see page 84)
- 3 Returns to the Control screen of the previous source.
- 4 Setup option and value display
- 5 Select a setup option.
- 6 Selects a set value.
- 7 Enters the set value.



- If **AMP Control** is not shown, touch  or  to display it.
- For the model name of amp you can control from the system, see the amp's catalog.
- For the options and values you can change and for the amp's operation when changed, see the amp's instruction manual.

# Setup Menu

English

## DAB Set Up (with the optional accessory DAB Tuner connected only)

 
The DAB reception can be set.

### Displaying the DAB Set Up screen





DAB Set Up

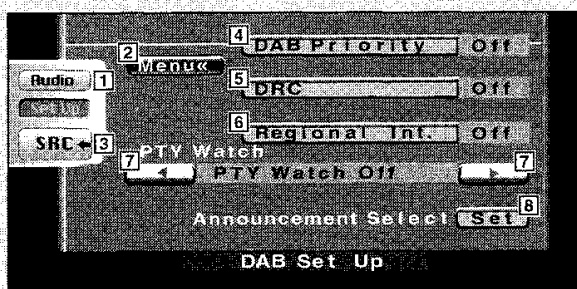DAB Set Up screen



- 1 Calls the Sound Effects Menu. (see page 84)
- 2 Calls the Setup Menu.
- 3 Returns to the Control screen of the previous source.
- 4 Turns the DAB Priority On or Off.
- 5 Turns the Dynamic Range Control function On or Off.
- 6 Turns the Regional Announcement function On or Off.
- 7 Sets a program type to be selected automatically when the receiving ensemble starts.
- 8 Displays the Announcement Selection screen.




If **DAB Set Up** is not shown, touch  or  to display it.

## Announcement Selection

 
Various announcement reception parameters can be set.

### 1 Displays the Announcement Selection screen

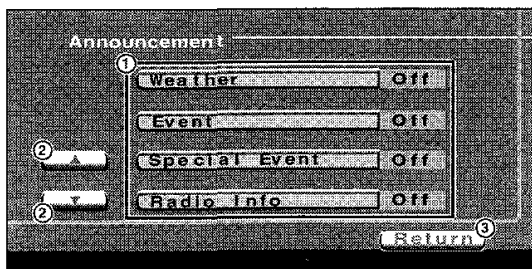

- ① Turns the Announcement Reception function On or Off.
- ② Scrolls the Announcement items.
- ③ Returns to the DAB Set Up screen.

### 2 Set the announcement parameters

 

Traffic News:	Traffic information
Transport News:	Time table information of public transportation services
Warning:	Lower priority items than alarms (power failure, cutoff of water supply and others)
News:	News flash
Weather:	Weather forecasting
Event:	Event information
Special Event:	Undetermined event information
Radio Info:	Programme information, advance notice
Sports news:	Sports news
Financial news:	Financial news

### 3 Terminate the setup



# Sound Effects Menu

English

 
## Sound Effects Menu

You can set up the receiver sound effects.

### Displaying the Control screen



Control screen

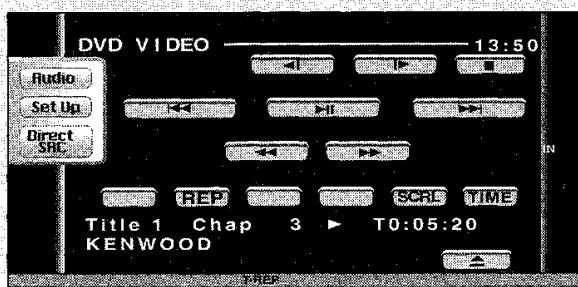


You can display the same Sound Effects Menu on the Control screen of any source.

### Displaying the Sound Effects Menu screen



 Sound Effects screen

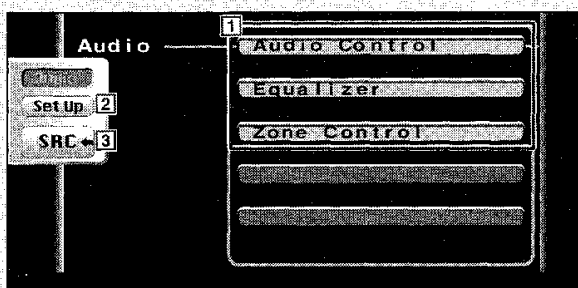

- 1 Calls the Sound Effects Menu.
- 2 Calls the Setup Menu. (see page 57)
- 3 Returns to the Control screen of the previous source.




- Your setup on the <Sound Effects Menu> is adjusted automatically according to your <Audio Set Up> (see page 58) on the Setup menu. We recommend you to complete the <Audio Set Up> first, then set up the <Sound Effects Menu>.
- Displayed items vary depending on the optional accessory connected.



## Audio Control

 You can adjust the front and rear and right and left audio balance.

### Displaying the Audio Control 1 screen

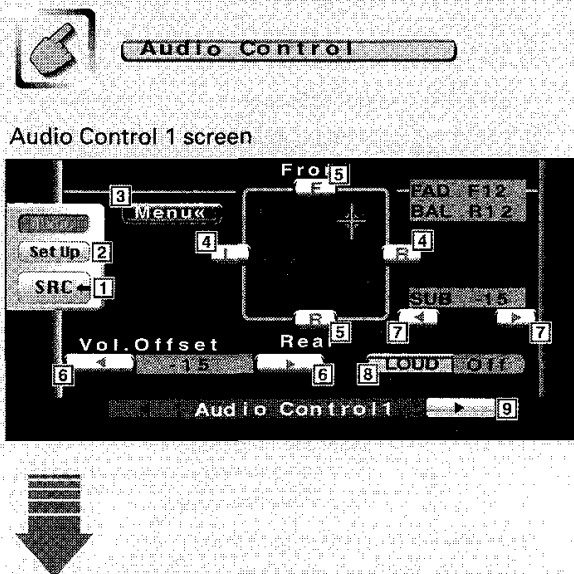

- [1] Returns to the Control screen of the previous source.
- [2] Calls the Setup Menu. (see page 57)
- [3] Calls the Sound Effects Menu.
- [4] Adjusts the right and left volume balance.
- [5] Adjusts the front and rear volume balance.
- [6] Adjusts the volume of the present source based on the difference level of original volume.
- ! If you have increased the volume first, then reduced it using the "Vol. Offset", the big sound may suddenly be generated when you switch to another source.
- [7] Adjusts the subwoofer volume.
- [8] Turns the Loudness control function On or Off. (Does not appear when the optional accessory DSP unit is connected.) If turned "On", high and low tones are automatically enhanced during low volume. (On)
- [9] Displays the Audio Control 2 screen.

### Displaying the Audio Control 2 screen



- [10] Adjusts the bass boost of the B.M.S power amplifier (optional accessory).
- ! You may not set some models of power amp boost to "+18". See the catalog or instruction manual of power amplifier.
- [11] Set the center frequency of bass boost you have set for the "AMP Bass". If you set it to "Low", the center frequency is dropped for 20 to 30%.
- [12] Displays the Audio Control 1 screen.

 
# Sound Effects Menu

English

## Equalizer

You can set up the equalizer.

### Displaying the Equalizer screen

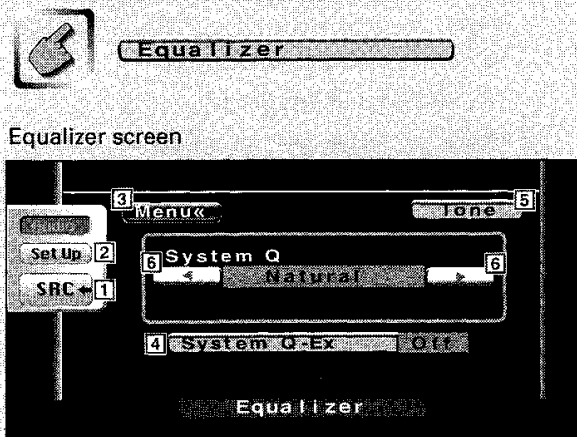

Equalizer screen

1 Returns to the Control screen of the previous source.

2 Calls the Setup Menu. (see page 57)

3 Calls the Sound Effects Menu.

4 Select the adjustment items for the Tone Curve setup. (Does not appear when the optional accessory DSP unit is connected.)  
If you set it to "Off", only "Level" can be set up for Tone Curve.

5 **Tone** : Displays the Tone curve setup screen. (see page 87)

**PEQ** : Displays the Parametric Equalizer screen. (see <Parametric Equalizer> page 88) (with the optional accessory DSP unit connected)  
You can adjust the value set for the Equalizer Curve Type.

6 Selects an equalizer curve type.  
You can select any of the following equalizer curves.

#### System Q

- "Natural"
- "Rock"
- "Pops"
- "Easy"
- "Top 40"
- "Jazz"
- "User" (when the tone curve (page 87) is set up)

#### KBS (with the optional accessory DSP unit connected)

- "Natural"
- "Top 40"
- "Rock"
- "Dance"
- "Vocal"
- "Classic"
- "User" (when Parametric Equalizer (page 88) is set up)

## Tone curve setup

You can set a Tone curve.

### 1 Display the Tone setup screen



Tone setup screen

 


- ① Bass adjustment items are displayed.
- ② Middle adjustment items are displayed.
- ③ Treble adjustment items are displayed.
- ④ Bass DC Extend settings  
If turned "On", it extends the bass center frequency to the low register by approximately 20%.
- ⑤ Returns to the Equalizer screen.



Tone curve can be set for each source.

### 2 Select a frequency band you wish to adjust



You can adjust the following frequency bands.

Bass: 60, 70, 80, 100/150 (When "Q Factor" is "2.00") Hz

Middle: 500, 1k, 1.5k, 2k Hz

Treble: 10k, 12.5k, 15k, 17.5k Hz


### 3 Set a center frequency


 
### 4 Set a level



### 5 Set a Q factor



You can set it up only when Bass or Middle is adjusted.

### 6 Close the Tone setup screen



 
# Sound Effects Menu

English

## Parametric Equalizer

You can Manually set the equalizer curve by adjusting the center frequency, gain and Q value. (with the optional accessory DSP unit connected only)

### 1 Display the Parametric Equalizer screen

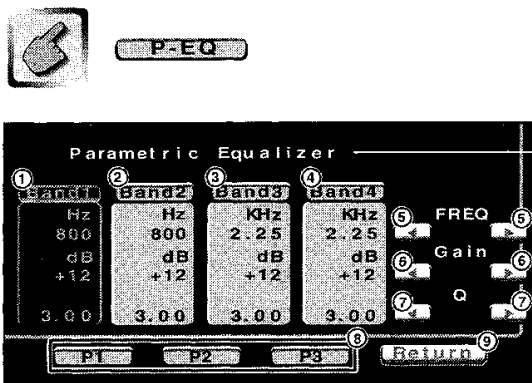

- ①②③④ Select a band to be adjusted.
- ⑤ Sets a frequency.
- ⑥ Sets a gain level.
- ⑦ Sets a Q value.
- ⑧ Store the present equalizer curve in memory, or calls it from memory.
- ⑨ Exits the Parametric Equalizer setup and returns to the Equalizer screen.

### 2 Select a frequency band you wish to adjust



You can adjust the following frequency bands.

- ① 60, 80, 100, 120, 160, 200, 250 Hz
- ② 315, 400, 500, 630, 800, 1k Hz
- ③ 1.25k, 1.6k, 2k, 2.5k, 3.15k, 4k Hz
- ④ 5k, 6.3k, 8k, 10k, 12.5k, 16k Hz

### 3 Set a center frequency



### 4 Set a gain



### 5 Set a Q value



### Store or call the equalizer curve into/from memory

To store the equalizer curve in memory:



Continue to touch **P1** to **P3** more than 2 seconds.

To call the equalizer curve from memory:



Touch **P1** to **P3** of the equalizer curve you wish to call from memory.

When you call an equalizer curve, its type is shown as "User".

### 6 Close the Parametric Equalizer screen





# Sound Effects Menu

English

## Zone Control

 
You can set the front and rear audio source.

### Displaying the Zone Control screen



Zone Control

Zone Control screen (when the Zone function is On)

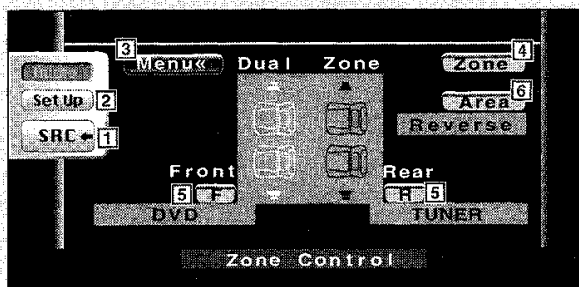

- 1 Returns to the Control screen of the previous source.
- 2 Calls the Setup Menu. (see page 57)
- 3 Calls the Sound Effects Menu.
- 4 Turns the Zone Function (that sets different source sounds for front and rear speakers) On or Off. When turned On, **F** and **R** are shown.
- 5 Sets the front and rear audio source separately. (This button appears when the Zone function is On.)



When the rear speaker sound is switched, the audio source that is output at the AV OUTPUT terminal is also switched to the same source. However, if you have set the "Area" to "Reverse", the audio source that is output at the AV OUTPUT terminal is switched depending on the front sound source.

- 6 Switches the front and rear audio sources. (This button appears when the Zone function is On.) Use "Reverse" to change over the front and rear audio sources.




- If the zone function is turned on, the **F/R** button appears on each source control screen, with which you can adjust the volume balance between the front and rear sources.



## Digital Effect (with the optional accessory DSP unit connected only)

 You can set up the Digital Effect.

### Displaying the Digital Effect screen

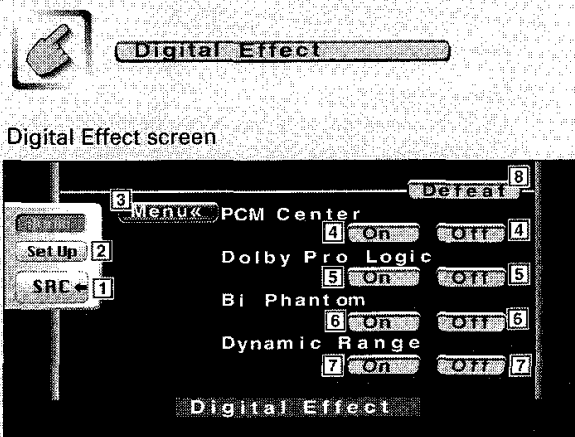

Digital Effect screen

- 1 Returns to the Control screen of the previous source.
- 2 Calls the Setup Menu. (see page 57)
- 3 Calls the Sound Effects Menu.
- 4 **PCM Center**  
If you set to "On", a sound is output from the center speaker.
- 5 Turns the Dolby Pro Logic function on or off.
- 6 Turns the Bi Phantom function on or off.  
If you set to "On", the signal of the center channel is controlled so that it can be exactly positioned.
- 7 Sets up the dynamic range when the Dolby Digital sound is used.  
If you set to "On", it compresses the dynamic range to control loud sounds.
- 8 The DSP unit settings return to default.



- The Dolby Pro Logic and PCM Center functions are effective when the 2ch PCM signal is used.
- You cannot set up "Bi Phantom" when "Dolby Pro Logic" is "Off".
- You cannot set up "PCM Center" when "Dolby Pro Logic" is "On".

# Sound Effects Menu

English

## Position (with the optional accessory DSP unit connected only)

 
You can adjust the sound effects according to your listening position.

### Displaying the Position screen



Position

Position screen

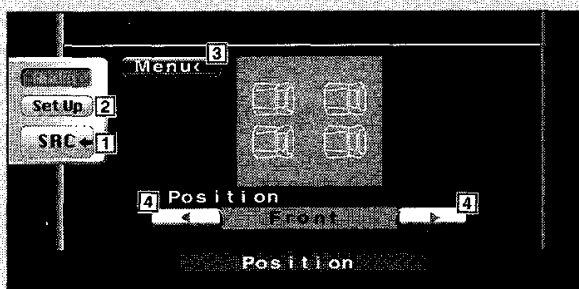

1 Returns to the Control screen of the previous source.

2 Calls the Setup Menu. (see page 57)

3 Calls the Sound Effects Menu.

4 Sets a listening position.

You can select any of "Front R" (Right front), "Front L" (Left front), "Front" (All front), "Rear" (All rear) and "ALL" (All) positions.



The final distance is adjusted to the total of Car Type Set Up value (see page 60) and Position Setup (both Position and Position Fine Control) value.





# Glossary

## DVD: Digital Versatile Disc

A type of disc which contains recording of audio/video packaged media with high video and audio quality, such as a movie, featuring large recording capacity and digital signal processing capability.

## VCD: VIDEO CD

A type of CD which contains the recording of moving images. It compresses image information by about 1/120 and audio information by about 1/6 and accommodates up to 74 minutes of recording in a disc with the same diameter as ordinary music CD of 12 cm.

Some VCDs do not have the P.B.C. compatibility and are capable of playback only, while some are P.B.C.-compatible and are capable of various special playback control operations. This player can play both of these VCDs.

## MPEG: Moving Picture Expert Group (DVD, VCD)

This is an international standard for digital video and audio compression and decompression in media.

## Dolby Digital

This is a digital audio compression technology developed by Dolby Laboratories. It is compatible with 5.1-channel surround audio as well as normal stereo (2-channel) audio and can accommodate a large amount of audio data efficiently in a disc.

## DTS

Name of a digital surround system developed by Digital Theater Systems, Inc.

## Top menu/menu (DVD)

Some DVDs display more than one title in a screen. This screen is referred to as the top menu.

The menu is the item display (menu screen) for use in setting operations. The menu can be recalled any time during playback to perform settings according to the current software, including the audio switching between Dolby Digital and PCM, switching of language used in the subtitles and spoken voice.

## Title number (DVD)

The title is the largest unit of video and audio recorded in a DVD. It usually corresponds to a single movie of video software or an album (sometimes a piece of music) of music software. The numbers assigned to individual titles are referred to as the title numbers.

## Chapter number (DVD)

The chapter is a section of video and audio recorded in a DVD. A title is composed of several chapters. The numbers assigned to individual chapters are referred to as the chapter numbers.

## Subtitles (DVD)

Some DVD discs contains the recording of more than one subtitle language. This player allow you to select one of the recorded subtitle languages during playback.

## Track number (CD, VCD)

A track is also a section of video and audio recorded in a disc. The numbers assigned to individual tracks are referred to as the track numbers.

With most of music CDs, a track is assigned to a piece of music. However, with a VCD, the sections of the contents do not always correspond to the assigned tracks.

As (special) playback functions such as skipping and programming of ordinary CDs are based on track number data, such playback functions are sometimes impossible with some VCDs.

## P.B.C.: Play-Back Control (VCD)

When a VIDEO CD carries "Play Back Control capable" or similar message on the disc or jacket, desired scenes and information can be played back in an interactive manner using a hierarchical structure while viewing the menu screens displayed on the TV screen.

# Troubleshooting Guide

---

Some system functions are limited to control depending on your setup.

- The rear speakers of DTA cannot be set.
- The "Channel Level" of rear speakers cannot be set.

"Multi Channel" has been set to "2/0" or "3/0" (no rear speaker setting) on the Speaker Set Up screen (page 61).

- No signals can be set.
- The "Equalizer" cannot be set.
- The "Position" cannot be set.
- The "Car Type Setup" value cannot be set.
- The "Speaker Setup" value cannot be set.
- No crossover frequency can be set.
- The "Channel Level" (test signal output) cannot be set.

The Zone Control has been turned On (page 90).

- The center speaker for DTA cannot be set.
- The "Channel Level" of the center speaker cannot be set.

"Multi Channel" has been set to "2/0" or "2/2" (no center speaker setting) on the Speaker Set Up screen (page 61).

- The subwoofer of DTA cannot be set.
- The "Channel Level" of the subwoofer cannot be set.

"Sub Woofer" has been set to "Off" on the Speaker Set Up screen (page 61).

# Troubleshooting Guide

English

What might appear to be a malfunction in your unit may just be the result of slight misoperation or miswiring. Before calling service, first check the following table for possible problems.

## ■ General

### The power does not turn on.

- The fuse has blown.
- After checking for short circuits in the wires, replace the fuse with one having the same rating.

### The desired source is NOT selected although you pressed the SRC button.

- An optional unit required to listen to each source is not connected yet.
- The RESET button is not pressed yet although the optional unit has been connected to the system.
- The "O-N" switch of the optional unit is at the "O" position.
- A disc changer not supported by the system is used.
- A non-connected source is not selected. See <INSTALLATION MANUAL> and connect the unit correctly.
- Press the reset button (see page 4).
- Set the "O-N" switch to the "N" position.
- Use a disc changer supported by the system (see page 4).

### Nothing happens when the buttons are pressed.

- The computer chip in the unit is not functioning normally.
- Press the reset button on the unit (see page 4).

### No television/video image appears.

- The unit is not connected to the parking brake detection switch.
- The parking brake is not engaged.
- Make proper connections according to <INSTALLATION MANUAL>.
- For safety reasons no television/video images are displayed while the vehicle is moving. Engaging the parking brake will cause images to be displayed.

### The screen is dark.

- The unit is in a location where temperature is low.
- If the temperature of the monitor unit drops, the screen may appear darker when power is first turned on due to the characteristics of a liquid crystal panel. Wait a while after turning power on for the temperature to rise. Normal brightness will return.

### The screen does not darken when the vehicle's lights are turned on.

- The unit is set to auto dimmer.
- The illumination wire has not been connected. (If manual dimmer is set)
- When the unit is set to auto dimmer, it is not linked to the vehicle's light switch.
- Make proper connections according to <INSTALLATION MANUAL>.

### AM/FM radio reception is poor and/or there is noise.

- The TV antenna and vehicle's radio antenna are too close.
- Separate the two antennas as far as possible.
- Turn off the main unit.

### The remote controller does not operate.

- The remote control mode selector is not set correctly.
- Switch the remote control mode selector according to the source you select (see page 10).

**No sound can be heard, or the volume is low.**

- Attenuator is turned on.
- The fader or balance settings are set all the way to one side.
- The input/output wires or wiring harness are connected incorrectly.

- Turn off Attenuator.
- Reset the fader and/or balance settings.
- Reconnect the input/output wires or the wiring harness correctly. See the section on <INSTALLATION MANUAL>.

**The sound quality is poor or distorted.**

- One of the speaker wires is being pinched by a screw in the car.
- The speakers are not wired correctly.

- Check the speaker wiring.
- Reconnect the speaker wires so that each output terminal is connected to a different speaker.

**Radio reception is poor.**

- The car antenna is not extended.
- The antenna control wire is not connected.

- Pull the antenna out all the way.
- Connect the wire correctly, referring to the section on <INSTALLATION MANUAL>.

**The memory is erased when the ignition is turned off.**

- The battery wire has not been connected to the proper terminal.
- The ignition and battery wire are incorrectly connected.

- Connect the wire correctly, referring to the section on <INSTALLATION MANUAL>.
- Connect the wire correctly, referring to the section on <INSTALLATION MANUAL>.

**The sound/picture skips on a DVD/VCD/CD.**

- The disc is scratched or dirty.

- Clean the disc, referring to the section on <Disc cleaning> (see page 6).

**A track will not play.**

- Random play has been selected.

- Turn off random play.

**A VCD cannot be played using menus.**

- The VCD disc being played is not compatible with P.B.C.

- Menu playback is available only with VCD discs recorded with P.B.C.

**The subtitle is not displayed.**

- The DVD disc being played does not contain the recording of subtitles.

- The subtitle cannot be displayed when the DVD disc being played does not contain the recording of subtitles.

**The voice (or subtitle) language cannot be changed.**

- The DVD disc being played does not contain the recording of more than one audio (or subtitle) language.

- The voice (or subtitle) language cannot be changed when the DVD disc being played does not contain the recording of more than one voice (or subtitle) language.

# Troubleshooting Guide

English

## The viewing angle cannot be changed.

- The DVD disc being played does not contain the recording of more than one angle.
- You are attempting to switch the angle in a DVD section where more than one angle is not recorded.
- The viewing angle cannot be changed when the DVD disc being played does not contain the recording of more than one angle.
- More than one viewing angle may be recorded only in limited sections in a disc.

## Playback will not start even after a title is selected.

- A viewing restriction (RATING) has been set for the disc.
- Check the viewing restriction level (RATING) setting.

## The voice or subtitle language selected in the initial setting is not played.

- The DVD disc being played does not contain the recording of the selected voice or subtitle language.
- Use a DVD disc containing the recording of the selected voice or subtitle language.

## ■ Disc source

### The disc control mode cannot be selected.

- No wire has been connected to the disc changer input terminal on the unit.
- Connect the wire to the disc changer input terminal on the unit.

### The specified disc does not play, but another one plays instead.

- The specified CD is quite dirty.
- The CD is upside-down.
- The disc is loaded in a different slot from that specified.
- The disc is severely scratched.
- Clean the CD.
- Load the CD with the labeled side up.
- Eject the disc magazine and check the number for the specified disc.
- Try another disc instead.

### The sound skips.

- Something is touching the disc changer.
- The CD is scratched or dirty.
- Remove whatever is touching it.
- If skipping happens at the same place when the car is stopped, something with the CD is wrong. Clean the CD.

### The display shows that the changer is being played, but no sound can be heard.

- The computer chip in the unit is not functioning normally.
- Press the reset button on the unit (see page 4).

### The specified track will not play.

- Random play or magazine random play has been selected.
- Turn off random play or magazine random play.

### Track repeat, disc repeat, track scan, disc scan, random play, and magazine random play start by themselves.

- The setting is not cancelled.
- The settings for these functions remain on until the setting to off or the disc ejected, even if the power is turned off or the source changed.

### Can't remove disc.

- The cause is that more than 10 minutes has elapsed since the vehicle ACC switch was turned OFF.
- The disc can only be removed within 10 minutes of the ACC switch being turned OFF. If more than 10 minutes has elapsed, turn the ACC switch ON again and press the Eject button.

## ■ MP3/WMA source

### Cannot play an MP3/WMA.

- The media is scratched or dirty.
- Clean the media, referring to the CD cleaning of the section on <About discs> (see page 6).

### The sound skips when an MP3/WMA is being played.

- The media is scratched or dirty.
- Clean the media, referring to the CD cleaning of the section on <About discs> (see page 6).
- The recording condition is bad.
- Record the media again or use another media.

### The MP3/WMA track time isn't displayed correctly.

- —
- There are times when it isn't displayed correctly according to the MP3/WMA recording conditions.

### Can't display the ID3 tag information correctly.

- Record is not made in conformity with the ID3 tag version 1.x.
- Record in conformity with the ID3 tag version 1.x. Also, the display may be incorrect if an MP3/WMA file uses the ID3 tag v1.x standard and if this standard has been expanded after production of the machine software.

**The following messages are displayed when certain problems are occurring in your system. Take the recommended actions.**

<b>Hot Error</b>	The protective circuit in the unit activates when the temperature inside the unit exceeds 60°C (140°F), stopping all operation. ⇒ Cool down the unit by opening the windows or turning on the air conditioner. As the temperature falls below 60°C (140°F), the disc will start playing again.
<b>Hold Error</b>	The protective circuit in the unit activates when the temperature inside the automatic disc changer exceeds 60°C (140°F), stopping all operation. ⇒ Cool down the unit by opening the windows or turning on the air conditioner. As the temperature falls below 60°C (140°F), the disc will start playing again.
<b>Mecha Error</b>	The disc player is malfunctioning. ⇒ Eject the disc and try inserting it again. Contact the Kenwood dealer if this indicator continues blinking or the disc cannot be ejected.
<b>Disc Error</b>	The unplayable discs is inserted.
<b>Read Error</b>	The disc is upside-down. ⇒ Load the disc with the labeled side up. The disc is quite dirty. ⇒ Clean the disc, referring to the section on <Disc cleaning> (see page 6).
<b>Region code Error</b>	The DVD software encoded for other region code.
<b>Parental level Error</b>	The parental level is set to high levels.
<b>Error 07 — 67</b>	The unit is malfunctioning for some reason. ⇒ Press the reset button on the unit. If the "Error ##" code does not disappear, consult your nearest service center.

# Specifications

English

Specifications subject to change without notice.

## Monitor section

Picture size.....6.4 inches (diagonal) wide  
143.6(W)×77.1(H)mm  
Display system .....Transparent TN LCD panel  
Drive system .....TFT active matrix system  
Number of pixels.....336,960 (480H×234V×RGB)  
Effective pixels .....99.99%  
Pixel arrangement.....RGB striped arrangement  
Back lighting .....Cold Cathode Fluorescent Tube

## DVD section

D/A Converter .....24Bit  
Decoder .....Linear PCM/Dolby digital/dts/MP3/WMA  
Wow & Flutter .....Below Measurable Limit  
Frequency response  
(Sampling frequency;96k) .....20~44,000Hz  
(Sampling frequency;48k) .....20~22,000Hz  
(Sampling frequency;44.1k) .....20~20,000Hz  
Total harmonic distortion (1k) .....0.010%  
Signal to Noise ratio.....100dB (DVD 96k)  
Dynamic range.....100dB (DVD 96k)  
DISC Format.....DVD-Video/VIDEO-CD/CD-DA  
Sampling frequency.....44.1kHz/48kHz, 96kHz  
Quantifying bit number .....16/20/24bit

## FM Tuner section

Frequency range (200kHz).....87.9~107.9MHz  
Usable sensitivity (S/N=30dB) .....9.3dBf (0.8μV/75Ω)  
Quieting sensitivity (S/N=50dB) .....15.2dBf (1.6μV/75Ω)  
Frequency response (±3.0dB) .....30Hz~15kHz  
S/N (dB) (MONO) .....72dB  
Selectivity (±400kHz) .....≥ 80dB  
Stereo separation.....38dB (1kHz)

## AM Tuner section

Frequency range (10kHz) .....530kHz~1700kHz  
Usable sensitivity .....28dBμ

## Video section

Color system of external video input .....NTSC  
External video input level (RCA jacks) .....1Vp-p/75Ω  
External audio max input level(RCA jacks).....1V/22kΩ  
Analog RGB input .....0.7Vp-p/75Ω

## Audio section

Maximum Power (Front&Rear) .....50Wx4  
Full Bandwidth Power (Front&Rear)  
(at Less than 1%THD) .....22Wx4  
Preout level (V) .....2V/10kΩ  
Preout impedance .....≤ 600Ω  
Tone action  
Bass.....100 Hz ±10 dB  
Middle .....1 kHz ±10 dB  
Treble.....10 kHz ±10 dB

## General

Operating voltage .....14.4V (11V~16V)  
Current consumption .....15A  
Dimensions (W×H×D) .....182mm×112mm×163mm  
7-3/16×4-7/16×6-7/16inch  
Operational temperature range .....-10°C~60°C  
Storage temperature range .....-20°C~85°C  
Weight .....2.8kg (6.2lbs)

Although the effective pixels for the liquid crystal panel is given as 99.99% or more, 0.01% of pixels may not light or may light incorrectly.



**▲CAUTION**

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

In compliance with Federal Regulations, following are reproductions of labels on, or inside the product relating to laser product safety.

KENWOOD CORPORATION  
2967-3, ISHIKAWA-CHO,  
HACHIOJI-SHI  
TOKYO, JAPAN

KENWOOD CORP. CERTIFIES THIS EQUIPMENT  
CONFORMS TO DHHS REGULATIONS NO.21 CFR  
1040. 10, CHAPTER 1, SUBCHAPTER J.

Location : Bottom Panel

**FCC WARNING**

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

**NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE**

This Class B digital apparatus complies with Canadian ICES-003.



is a trademark of DVD Format/Logo Licensing Corporation registered in the U.S., Japan and other countries.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Manufactured under license from Dolby Laboratories.  
"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

"DTS" and "DTS 2.0 + Digital Out" are trademarks of Digital Theater Systems, Inc.

KENWOOD

 
# DDX7015/ DDX7045

## Correction / Corrección

English page 81

Français page 181

Español page 281



AMP Control



AMP Ctrl

English page 87

Français page 187

Español page 287



# KENWOOD

## **DDX7015 DDX7045**

---

MONITOR WITH DVD RECEIVER

### **INSTALLATION MANUAL**

MONITEUR AVEC RÉCEPTEUR DVD

### **MANUEL D'INSTALLATION**

MONITOR CON RECEPTOR DVD

### **MANUAL DE INSTALACIÓN**

MONITOR COM RECEPTOR DVD

### **MANUAL DE INSTALAÇÃO**

 
KENWOOD CORPORATION

# Before Installation

English

## Accessories

①




.....1

④



.....2

 ②




.....1

⑤



.....6

 ③



.....1

⑥



.....6

## Installation Procedure

1. To prevent a short circuit, remove the key from the ignition and disconnect the ⊖ battery.
2. Make the proper input and output wire connections for each unit.
3. Connect the speaker wires of the wiring harness.
4. Connect the wiring harness wires in the following order: ground, battery, ignition.
5. Connect the wiring harness connector to the unit.
6. Install the unit in your car.
7. Reconnect the ⊖ battery.
8. Press the reset button.

### ⚠ WARNING

If you connect the ignition wire (red) and the battery wire (yellow) to the car chassis (ground), you may cause a short circuit, that in turn may start a fire. Always connect those wires to the power source running through the fuse box.

### ⚠ CAUTION

 
 
 
 
- If your car's ignition does not have an ACC position, connect the ignition wires to a power source that can be turned on and off with the ignition key. If you connect the ignition wire to a power source with a constant voltage supply, as with battery wires, the battery may die.
- If the console has a lid, make sure to install the unit so that the faceplate will not hit the lid when closing and opening.
- If the fuse blows, first make sure the wires aren't touching to cause a short circuit, then replace the old fuse with one with the same rating.
- Insulate unconnected wires with vinyl tape or other similar material. To prevent a short circuit, do not remove the caps on the ends of the unconnected wires or the terminals.
- Connect the speaker wires correctly to the terminals to which they correspond. The unit may be damaged or fail to work if you share the ⊖ wires or ground them to any metal part in the car.
- When only two speakers are being connected to the system, connect the connectors either to both the front output terminals or to both the rear output terminals (do not mix front and rear). For example, if you connect the ⊕ connector of the left speaker to a front output terminal, do not connect the ⊖ connector to a rear output terminal.
- After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. on the car are working properly.
- Mount the unit so that the mounting angle is 30° or less.

# Connection

English

## ⚠ WARNING

If you connect the ignition wire (red) and the battery wire (yellow) to the car chassis (ground), you may cause a short circuit, that in turn may start a fire. Always connect those wires to the power source running through the fuse box.

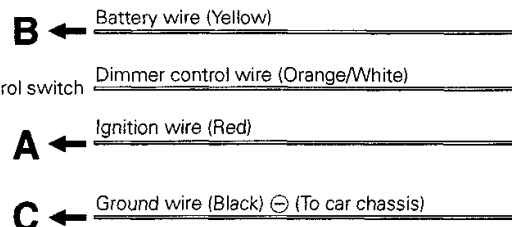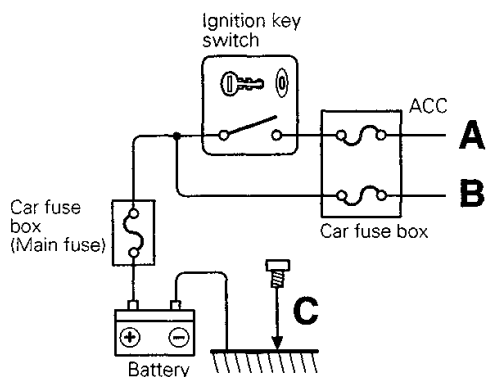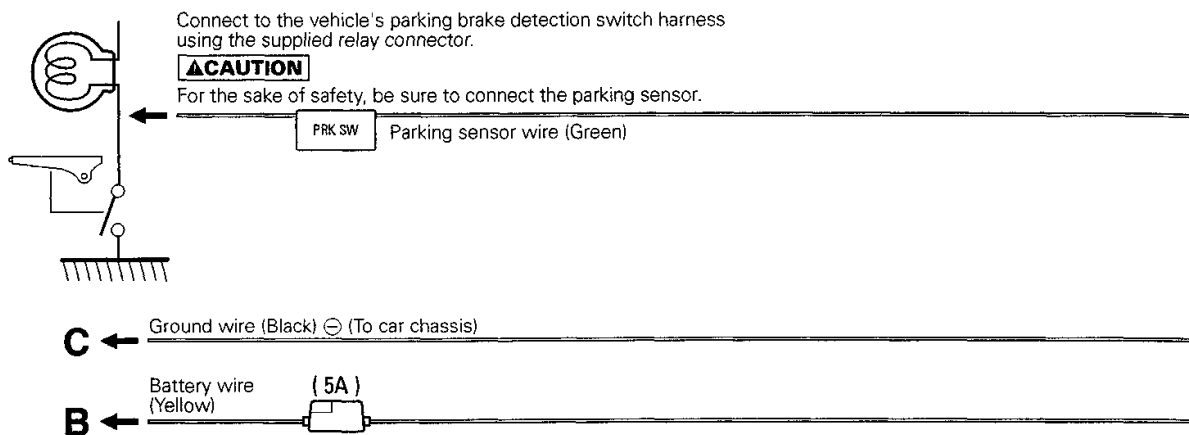

Depending on what antenna you are using, connect either to the control terminal of the motor antenna, or to the power terminal for the booster amplifier of the film-type antenna.

 
When using the optional power amplifier, connect to its power control terminal.

To "EXT.AMP.CONT." terminal of the amplifier having the external amp control function.

Motor antenna control wire (Blue)

Power control wire (Blue/White)

External amplifier control wire (Pink/Black)

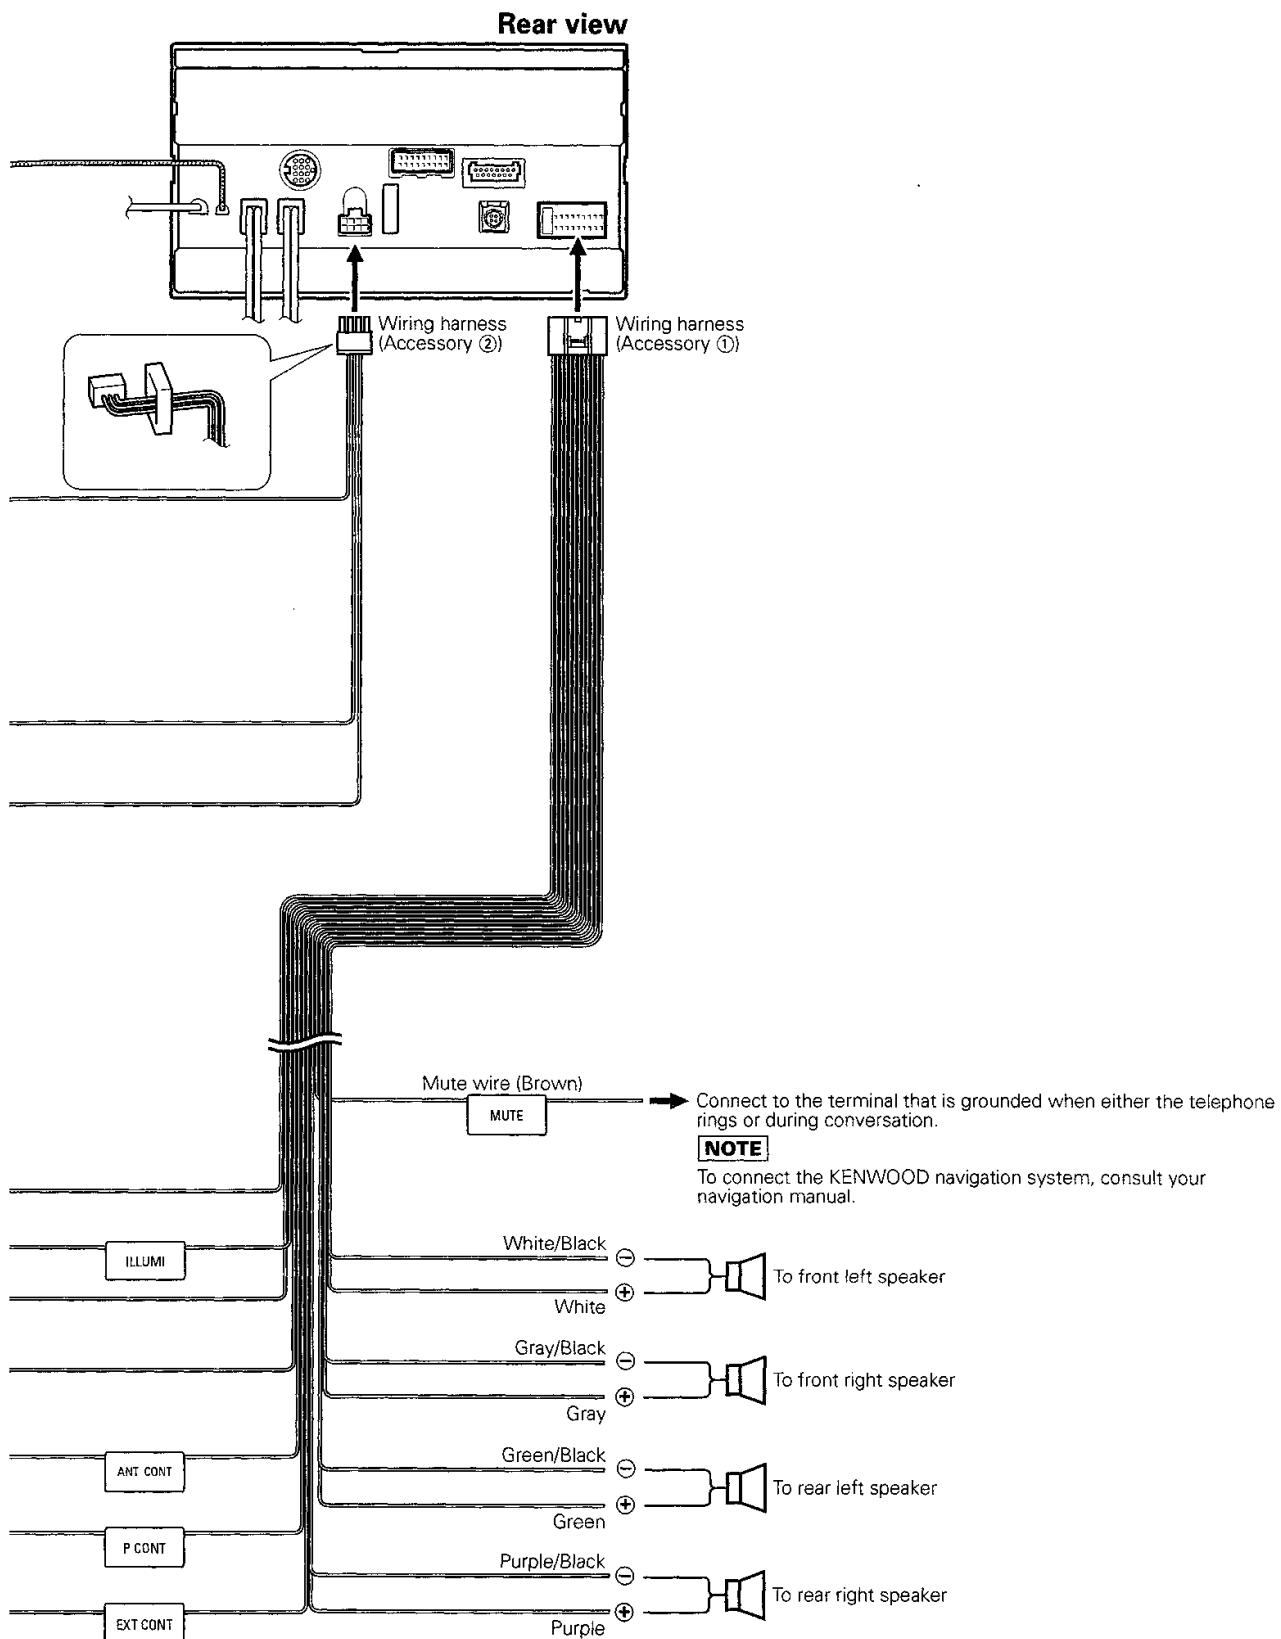




# Connection


English

 
## System Connection

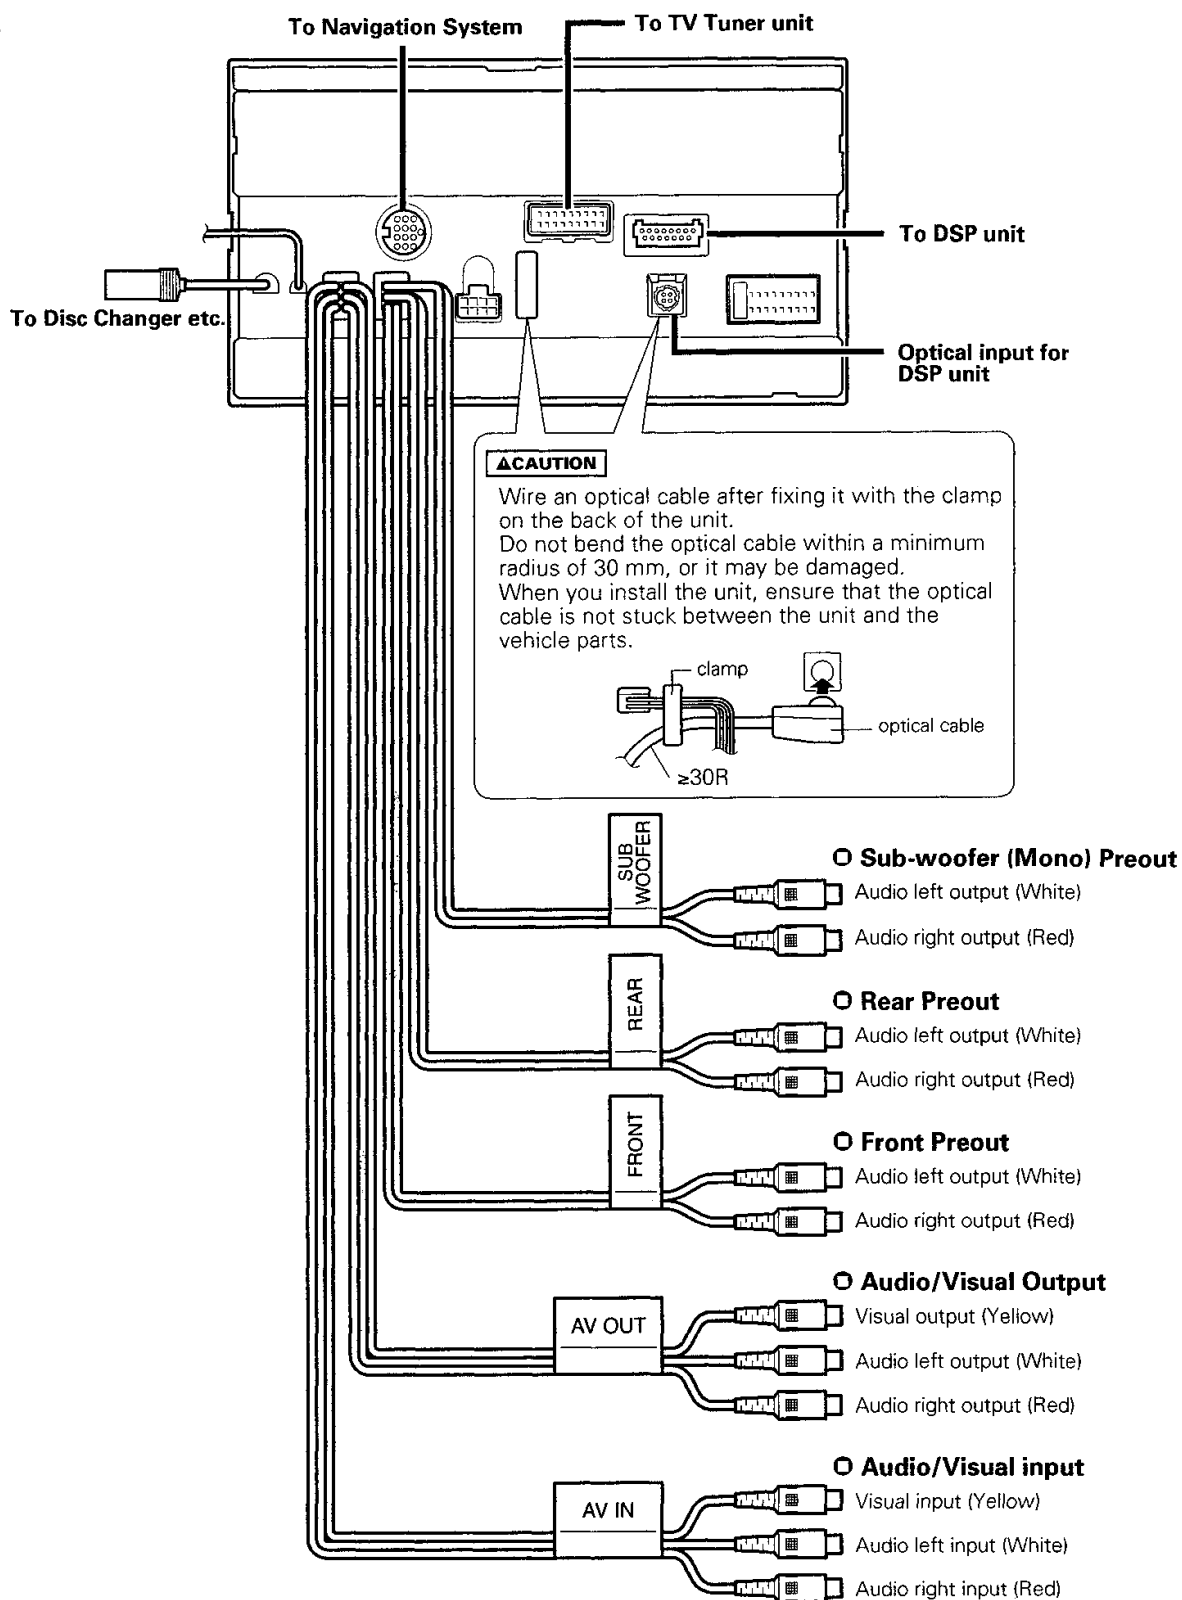

# Installation
 
## Installation for Monitor/Player Unit

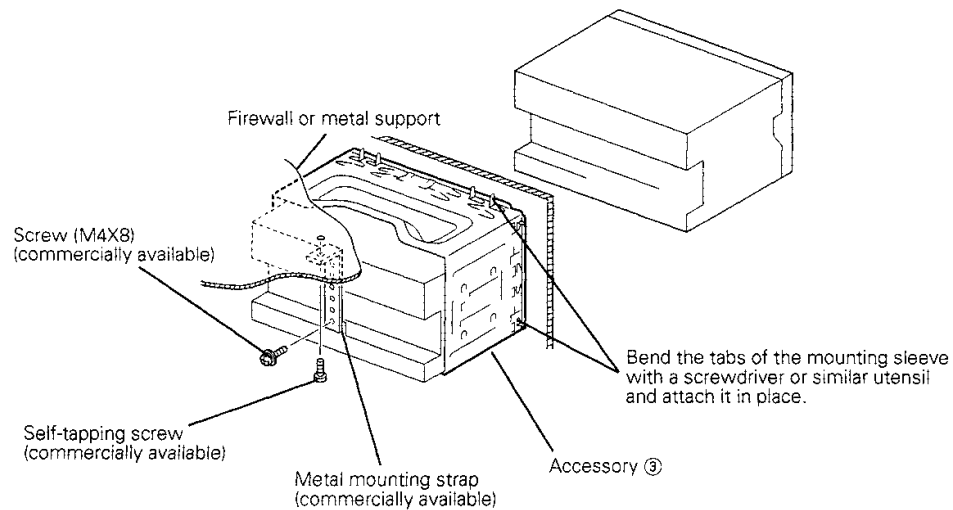


 Make sure that the unit is installed securely in place. If the unit is unstable, it may malfunction (eg, the sound may skip).

# Installation

 English

## Installing in Japanese-Made Cars


### ■ Installing on Toyota, Nissan or Mitsubishi Car Using Brackets

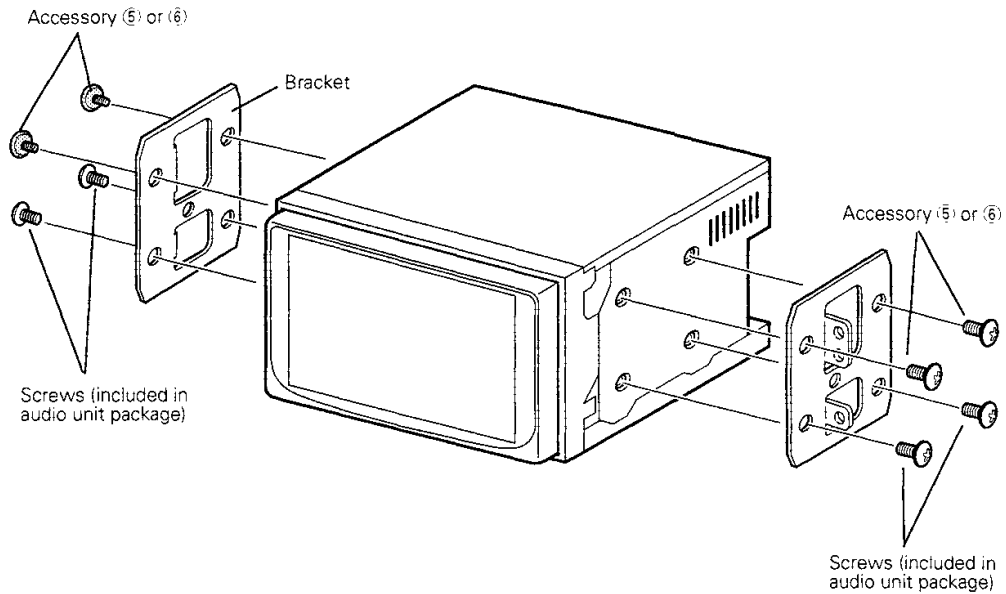

## Removing Monitor/Player Unit

### ■ Removing the Hard Rubber Frame (escutcheon)

 
1. Engage the catch pins on the removal tool ④ and remove the two locks on the lower level. Lower the frame and pull it forward as shown in the figure.

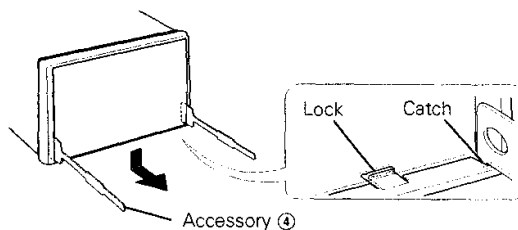

2. When the lower level is removed, remove the upper two locations.




 The frame can be removed from the top side in the same manner.

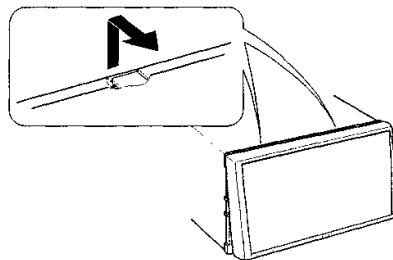

### ■ Removing the Unit

 
1. Refer to the section <Removing the Hard Rubber Frame> and then remove the hard rubber frame.
2. Remove the Hex-head screw with integral washer (M4 x 6) on the back panel.
3. Insert the two removal tools ④ deeply into the slots on each side, as shown.

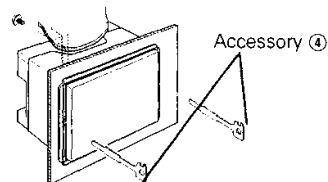


4. Lower the removal tool toward the bottom, and pull out the unit halfway while pressing towards the inside.



 Be careful to avoid injury from the catch pins on the removal tool.

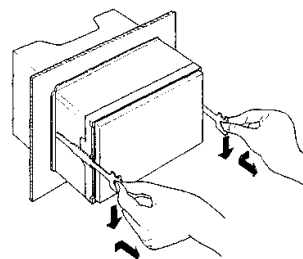

 5. Pull the unit all the way out with your hands, being careful not to drop it.

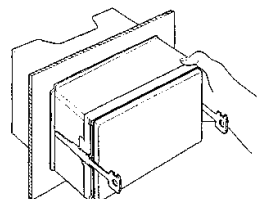

KENWOOD

This warranty will be honored only in the U.S.A.

## **KENWOOD LIMITED WARRANTY FOR CAR STEREO COMPONENTS**

### **HOW LONG IS THE WARRANTY**

Kenwood U.S.A. Corporation ("Kenwood") warrants this product for a period of one (1) year from the date of original purchase.

### **WHAT IS COVERED AND WHAT IS NOT COVERED**

Except as specified below, this warranty covers all defects in material and workmanship in Kenwood car stereo components. The following are not covered by the warranty:

1. Any product which is not distributed in the U.S.A. by Kenwood or which is not purchased in the U.S.A. from an authorized Kenwood car stereo dealer or an automobile dealer, unless the product is purchased through the U.S.A. Military Exchange Service.
2. Any product on which the serial number has been defaced, modified or removed.
3. Damage, deterioration or malfunction resulting from:
  - a. Any shipment of the product (claims must be presented to the carrier).
  - b. Installation or removal of the product.
  - c. Accident, acts of nature, misuse, abuse, neglect, unauthorized product modification or failure to follow instructions supplied with the product.
  - d. Repair or attempted repair by anyone not authorized by Kenwood.
  - e. Any other cause which does not relate to a product defect.

### **WHO IS PROTECTED**

This warranty is enforceable only by the original purchaser.

### **WHAT WE WILL PAY FOR**

We will pay for all labor and material expenses for covered items. Payment of shipping charges is discussed in the next section of this warranty.

### **HOW TO OBTAIN WARRANTY SERVICE**

If your KENWOOD product ever needs service:

1. Take or ship it to any KENWOOD Authorized Service Center in the U.S.A. along with & complete description of the problem. (if you are uncertain as to whether a Service Center is authorized, please call **1-800-KENWOOD** for the nearest Service Center. **1-800-536-9663**).
2. Although you must pay any shipping charges if it is necessary to ship the product for warranty service, we will pay the return shipping charges if the repairs are covered by the warranty within the United States.
3. Whenever your units are taken or sent for warranty service, you must include a copy of the original dated sales receipt as proof of warranty coverage.

### **LIMITATION OF IMPLIED WARRANTIES**

ALL IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE LENGTH OF THIS WARRANTY.

### **EXCLUSION OF DAMAGES**

KENWOOD'S LIABILITY FOR ANY DEFECTIVE PRODUCT IS LIMITED TO THE REPAIR OR REPLACEMENT OF THE PRODUCT AT OUR OPTION. KENWOOD SHALL NOT BE LIABLE FOR:

1. INSTALLATION OR REMOVAL CHARGES, DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECTS IN KENWOOD CAR STEREO COMPONENTS, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT; OR
2. ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

If a problem develops during or after the Limited Warranty Period, or if you have any questions regarding the operation of the product, you should contact your KENWOOD Authorized Dealer or Authorized Service Center. If the problem or your question is not handled to your satisfaction, please contact our Customer Relations Department at the address listed below:

KENWOOD USA CORPORATION  
P.O. Box 22745, 2201 East Dominguez Street, Long Beach, CA 90801-5745  
Tel: (310) 639-5300



## Register Online

Register your Kenwood Excelon  
product at [www.kenwoodusa.com](http://www.kenwoodusa.com)

Plus opt in to receive e-mail updates and other offers  
when you register at our web site.

KENWOOD  
eXcelon